
www.solid-air.nl

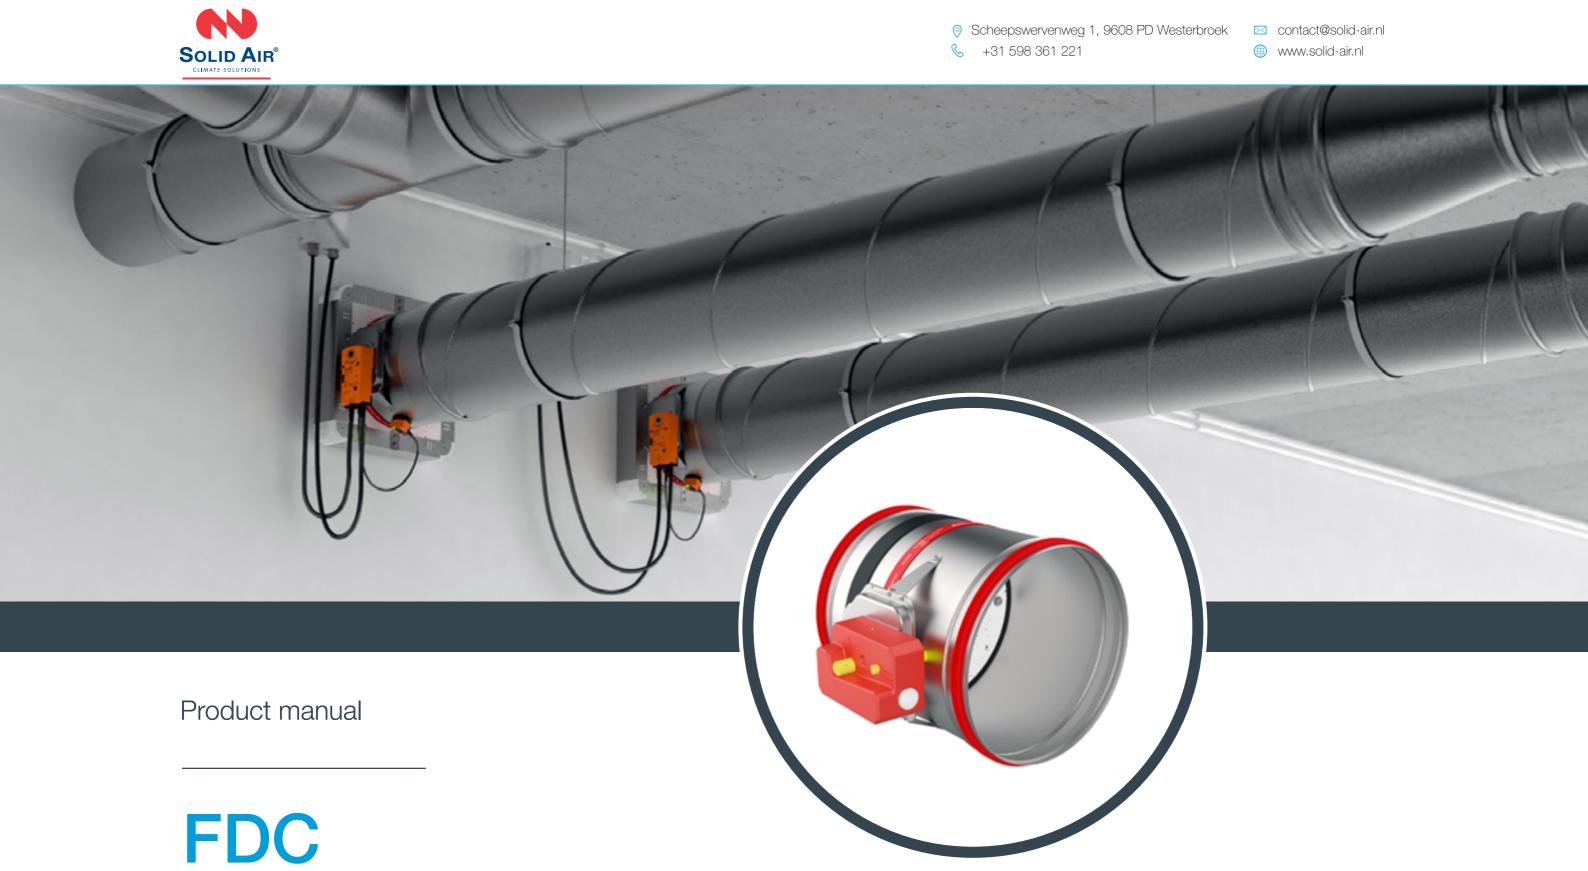


Fire damper

Fire protection

Version 2.4.2 Issue Date: 07.12.2021.



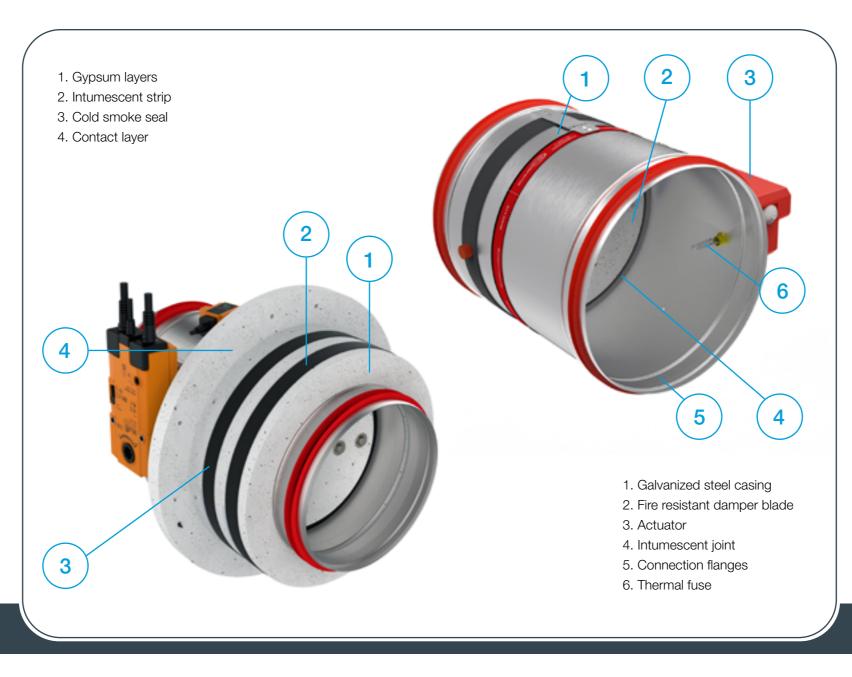

PRODUCT OVERVIEW

DIMENSIONS

INSTALLATIONS

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC



PRODUCT OVERVIEW

Fire dampers FDC are used for prevention of fire spread trough the ventilation ducts and between fire sections. Fire dampers consist of steel sheet casing, calcium silicate damper blade, damper blade mechanism outside of the airflow and a manual, electromagnetic or electric actuator.

Fire damper casing is made out of galvanized steel sheet. Variants produced from stainless steel and powder coated steel are also available. Calcium silicate blade is equipped with brass bearings and seals made out of polyurethane and elastomer rubber.

Fire dampers FDC25 are produced up to size d315 and have 25 mm thick damper blade. Fire dampers FDC40 are produced in sizes from d355 till d800 and have 40 mm thick damper blade.

FDC25 fire dampers are equipped with R25 manual mechanism and FDC40 fire dampers are equipped with R40 manual mechanism.

Manual spring return mechanism is equipped with thermal fuse that is triggered automatically when the temperature inside the duct reaches 72 °C. It can also be activated manually by the push of the button on the mechanism. Additional equipment for manual mechanism include end contact switches for damper position signalling. Electromagnetic actuators feature spring return mechanism with electromagnet for remote activation. Additional equipment for electromagnetic mechanism include end contact switches for damper position signalling. Rearming of the electromagnetic actuator is manual.

Fire dampers with electric actuators are equipped with Belimo actuator drives in 24 V or 230 V versions. Activation of fire dampers equipped with electric drives can be via 72 °C or 95 °C thermal fuse or remotely via control signal. Rearming of the electric fire damper can also be done remotely via control signal. All electric actuators are equipped with end switches for position signalling.

ATEX rated versions of fire dampers can be delivered with Schischek 24 V / 230 V electric actuators that are rated for installation in explosive atmosphere areas.

All fire dampers are tested according to the EN 1751 for airtightness and retain class 2 leakage on the closed damper blade and class C on the casing air leakage.





PRODUCT OVERVIEW

DIMENSIONS

INSTALLATIONS

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION



FIRE DAMPER - FDC

TESTS AND CERTIFICATES

All our dampers are submitted to a number of tests by official test institutes. Reports of these tests form the basis for the approvals of our dampers. Fire dampers are also suitable for installation in buildings with high hygienic demands such as hospitals, clinics and pharmaceutical areas.

To confirm this, out products are tested by an independent Institute of Hygiene, based in Gelsenkirchen, Ruhr, and comply with directives and guidelines in VDI 6022.



FIRE RESISTANCE CLASSIFICATION

FDC fire resistance is tested according to EN 1366-2 "Fire resistance tests for service installations- Part 2: Fire dampers". Classification of the fire dampers is defined according to EN 13501-3 Fire classification of construction products and building elements.

Installation in both, vertical and horizontal axis of rotation of the dampers blade is acceptable (with the axis angle 0 - 360°). Fire resistance of fire damper depends on classification of walls or ceilings. It is allowed to install products to walls or ceilings only according to products Declaration of Performance. Walls or ceilings with greater fire resistance can also be used. Fire damper should be installed according to the installation manual which can be found within this document.

Please consult latest Declaration of Performance:



www.solid-air.com/downloads

E - Integrity

I - Insulation

120/90/60 - Classification time in minutes

S - Smoke leakage

ve - Damper installed in vertical compartment

ho - Damper installed in horizontal compartment

 $\mathbf{i} {\leftrightarrow} \mathbf{o}$ - Fire performance criteria are met on both sides






TECHNICAL DATA

Fire damper casing is manufactured from galvanized steel sheet, but on demand can be produced out of:

- Galvanized steel and powder coated
- Stainless steel EN 1.4301/EN 1.4404 (AISI 304/316L)
- Stainless steel EN 1.4301/EN 1.4404 (AISI 304/316L) and powder coated

Fire damper for areas with potentially explosive atmospheres are also available

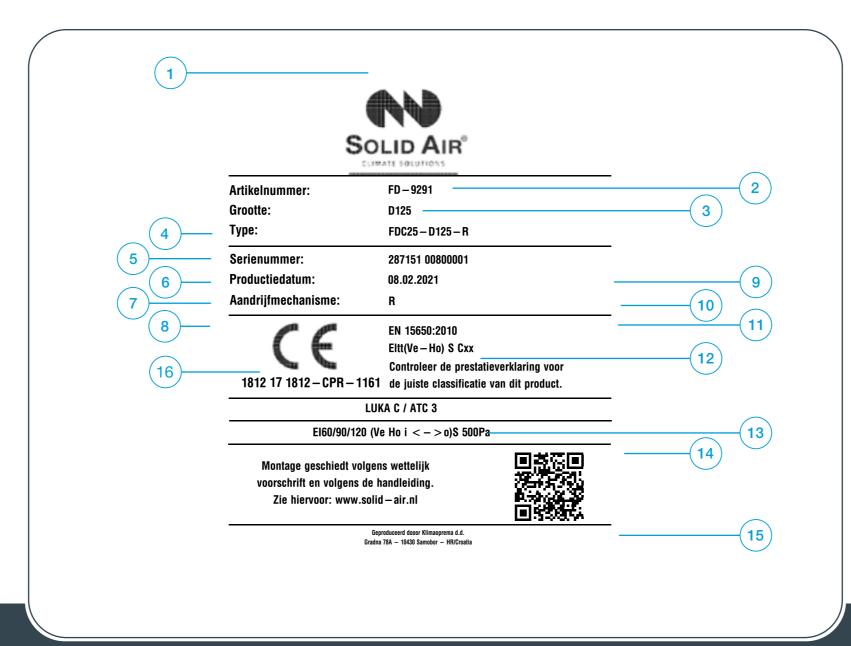

- PRODUCT OVERVIEW

 DIMENSIONS
- INSTALLATIONS
- <u>ACTUATORS</u>
- COMMUNICATIONS MODULES
- <u>ACCESSORIES</u>
- REPLACEMENTS
- MAINTENANCE AND OPERATION



FIRE DAMPER - FDC

Product label

- 1 Casing air leakage classification
- 2 Serial number
- 3 Production date
- 4 Type
- 5 Dimension of the fire damper
- 6 Mechanism type
- 7 Nominal voltage
- 8 Signalisation (end contacts)
- 9 IP protection
- 10 Free space
- 11 Thermal fuse temperature
- 12 Number of the European standard and year of its publication
- 13 Declaration of performance
- 14 Classification according to EN 13501-3
- 15 Barcode
- 16 CE mark

Product specifications

Nominal sizes FDC	100 - 800 [mm]
Casing length	380 mm
Temperature range	-20 °C 50 °C
Release temperature	72 °C (standard) or 95 °C (optional with electric actuator)
Volume flow rate range	up to 21700 m ³ /h
Differential pressure range	up to 1000 Pa
Casing air leakage	Class C, EN 1751
Closed blade air leakage	Class 3, EN 1751
Upstream velocity	< 12 m/s
EC conformity	EN 13501-3, EN 1366-2, EN 15650, EN 1751, CPR no.305/2011
Declaration of performance	DoP 711/2020_12

Pressure drop tables

Pressure drop values are described with the "Zeta" values for each size. The exact pressure drop in [Pa] is calculated using the following formula:

$\Delta p [Pa] = \zeta * v^2 * 0,6$

where ζ is Zeta value from the tables below, v is airflow velocity in [m/s]

FDC25	d100	d1	d125		d160 d200		250	d315
ζ	1,759	0,8	352	0,545	0,445	5,0	340	0,293
FDC40	d355	d400	d450	d500	d560	d630	d710	d800
ζ	0,428	0,389 0,344		0,325	0,312	0,232	0,206	0,179

Dimensional range

	Diameter [mm]	Cross section [dm²]	Net area [dm²]
	100	0,74	0,50
	125	1,17	0,87
FDC25	160	1,93	1,55
FDC20	200	3,05	2,56
	250	4,79	4,18
	315	7,64	6,87
	355	9,73	8,33
	400	12,37	10,79
	450	15,69	13,91
FDC40	500	19,39	17,41
-	630	30,86	28,36
-	710	39,24	36,42
-	800	49,86	46,68



MODELS

Casings

FDC25

Cylindrical fire damper with 25 mm damper blade and fire classification up to El120S. Sizes range from d100 till d315.

FDC40

Cylindrical fire damper with 40 mm damper blade and fire classification up to El120S. Sizes range from d355 till d800.

FDC25 - APP

Cylindrical fire damper with integrated Applique installation frame with 25 mm damper blade and fire classification up to El90S.

Sizes range from d100 till d315.

FDC25 - MF1/MF2

Cylindrical fire damper with integrated MF1 installation frame with 25 mm damper blade and fire classification up to El60S. Sizes range from d100 till d315.

FDC40 - MF2

Fire damper with integrated MF2 installation frame with 40 mm damper blade and fire classification up to El90S. Sizes range from d355 till d800.





DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION



FIRE DAMPER - FDC

Actuators

R (R-S)

Manual operating mechanism, optionally with end switches (R-S). In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermal fuse melting, or by manual activation on the operating mechanism. Upon closure, damper blade is locked in closed position and can only be opened manually. Thermal fuse melting point is 72 °C.

EMS-S

Electromagnetic operating mechanism, comes with end switches as standard. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermal fuse melting or remotely by triggering the electromagnet. Electromagnet is constantly under power and activates closing of the damper blade in case the power cuts out. Upon closure, damper blade is locked in closed position and can only be opened manually. Thermal fuse melting point is 72 °C.

M230-S

Belimo 230 V electro motor operating mechanism, comes with integrated end switches. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermoelectric release device or **EX** remotely by triggering the electro motor. Upon closure, damper blade is locked in closed position and can be opened by sending a signal to electro motor. Standard thermoelectric release point is 72 °C, optional 95 °C.

M24-S

Belimo 24 V electro motor operating mechanism, comes with integrated end switches. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermoelectric release device or remotely by triggering the electro motor. Upon closure, damper blade is locked in closed position and can be opened by sending a signal to electro motor. Standard thermoelectric release point is 72 °C. optional 95 °C.

M24-S-ST

Belimo 24 V electro motor operating mechanism, comes with integrated end switches. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermoelectric release device or remotely by triggering the electro motor. Upon closure, damper blade is locked in closed position and can be opened by sending a signal to electro motor. Standard thermoelectric release point is 72 °C, optional 95 °C. Actuator is additionally equipped with connection plug for easy connection with power supply and communication modules.

ATEX rated fire dampers are equipped with Schischek ExMax-5.10-BF actuators, ExPro-TT thermal switches and ExBox-BF plenum boxes. Optional casing can be produced in AISI316L stainless steel.

Ordering key

(2) Dimension (1) Damper type (3) Mechanism type (4) Mounted accessories

FDC25 d250 M230-S - IH

(1) FDC25 - d100 to d315 FDC40 - d355 to d800 FDC25-APP - d100 to d315 FDC25-MF1 - d100 to d315 FDC25-MF2 - d100 to d315 FDC40-MF2 - d355 to d800

(2) Damper diameter d100 till d800

(3) R - manual drive

R-S - manual drive with limit switches M230-S - electric actuator AC/DC 230 V M24-S - electric actuator AC/DC 24 V M24-S-ST - electric actuator AC/DC 24 V with

connection plug

EMS-S - electromagnetic drive EX - electric actuator Schischek ExMax -5.10-BF +ExPro-TT+ExBox-BF

(4) IH - inspection hatch

5



FDC25/FDC40 - R (manual mechanism)

- Automatic closure when the temperature in the duct exceeds 72 °C
- Manual rearming with handle
- Manual unlocking possible for periodical test of fire damper
- Optional with end position switches (-R-S)
- FDC25 fire dampers are equipped with R25 manual mechanism
- FDC40 fire dampers are equipped with R40 manual mechanism



PRODUCT OVERVIEW

DIMENSIONS

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION




K [mm] 120 128 140 155 176 204 221

*K - Dimension of the minimum installation opening

FIRE DAMPER - FDC

FDC25-R25 (up to d315)

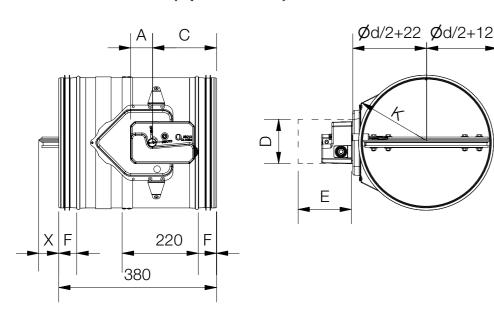

FDC40-R40 (d355 up to d800)

242

265


289

317

351

389

433

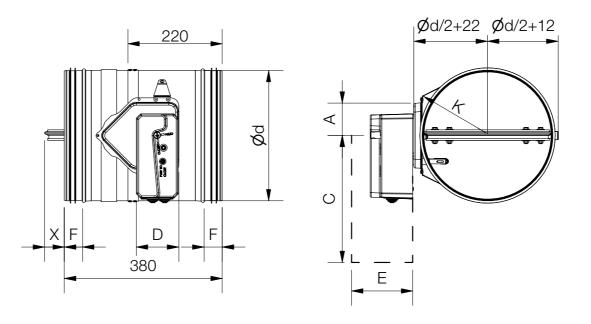

	Product	A [mm]	C [mm]	D [mm]	E [mm]	F [mm]
Ī	FDC 25	55	150	105	150	42
	FDC 40	55	200	105	200	42

Length of damper blade outside of casing (X dimension on front side):

X=(Ød/2)-110 [mm]

*If the damper is larger than Ø540, use formula (Y dimension on back side):



FDC25/FDC40 - EMS (solenoid actuator)

- Electromagnetic actuator with integrated limit switches and thermal fuse release mechanism (72 °C)
- Manual rearming with handle

DIMENSIONS

- Remote closing with electromagnetic actuator
- Manual closing possible
- EMS solenoid actuator is constantly under power.
 Actuating mechanism is tripped when the power is interrupted, or thermal fuse is melted.



	FDC25-EMS							FDC40-EMS							
Ød [mm]	100	125	160	200	250	315	355	400	450	500	560	630	710	800	
Weight [kg]	5,3	5,7	6,2	6,9	7,8	9,2	12,2	13,8	15,7	17,8	20,7	23,9	28	34	
K [mm]	120	128	140	155	176	204	221	242	265	289	317	351	389	433	

^{*}K - Dimension of the minimum installation opening



<u>DIMENSIONS</u>

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>


COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC

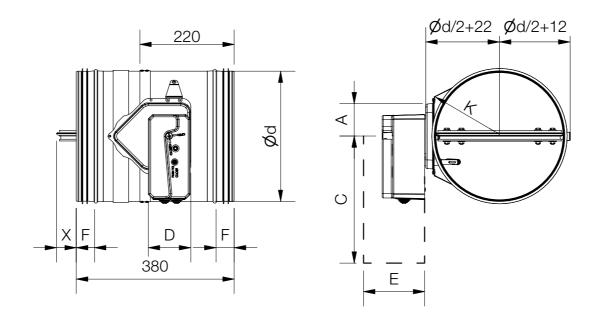

Product	A [mm]	C [mm]	D [mm]	E [mm]	F [mm]
FDC 25	55	150	105	150	42
FDC 40	55	200	105	200	42

Length of damper blade outside of casing (X dimension on front side):

X=(Ød/2)-110 [mm]

*If the damper is larger than Ø540, use formula (Y dimension on back side):



FDC25/FDC40 - M (electric actuator)

- Thermoelectric release device (72 °C) with electric actuator and return spring
- Integrated end switches
- Fully automatic operation

DIMENSIONS

 Optional 95 °C thermoelectric release device for warm air installations



			FDC	25-M				FDC40-M							
Ød [mm]	100	125	160	200	250	315	355	400	450	500	560	630	710	800	
Weight [kg]	4,5	4,9	5,4	6,1	7	8,4	11,7	13,3	15,2	17,3	20,2	23,4	29,1	35,1	
Actuator type	BFL	BFL	BFL	BFL	BFL	BFL	BFN	BFN	BFN	BFN	BFN	BFN	BF	BF	
K [mm]	120	128	140	155	176	204	221	242	265	289	317	351	389	433	

*K - Dimension of the minimum installation opening

PRODUCT OVERVIEW

DIMENSIONS

INSTALLATIONS

ACTUATORS


COMMUNICATIONS MODULES


ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC

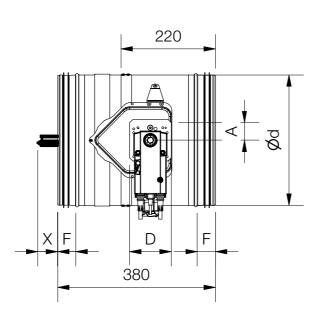

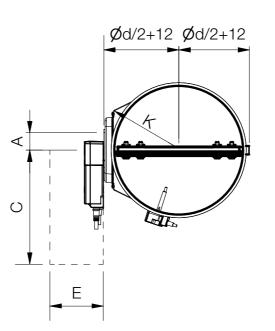

F [mm]
42
42

Product	A [mm]	C [mm]	D [mm]	E [mm]
BFL (M)	25	200	90	120
BFN (M)	25	225	100	120
BF (M)*	50	250	100	120

Length of damper blade outside of casing (X dimension on front side):

X=(Ød/2)-110 [mm]


*If the damper is larger than Ø540, use formula (Y dimension on back side):



FDC25/FDC40 - EX (electric actuator)

- Thermoelectric release device (72 °C) with electric actuator and return spring
- Integrated end switches
- Fully automatic operation
- The EX version of the damper comes with:
 - 1) Safety temperature trigger Schischek ExPro-TT
 - 2) Electric actuator Schischek ExMax-5.10-BF
 - 3) Terminal box Schischek ExBox-BF

For more information see page 43.

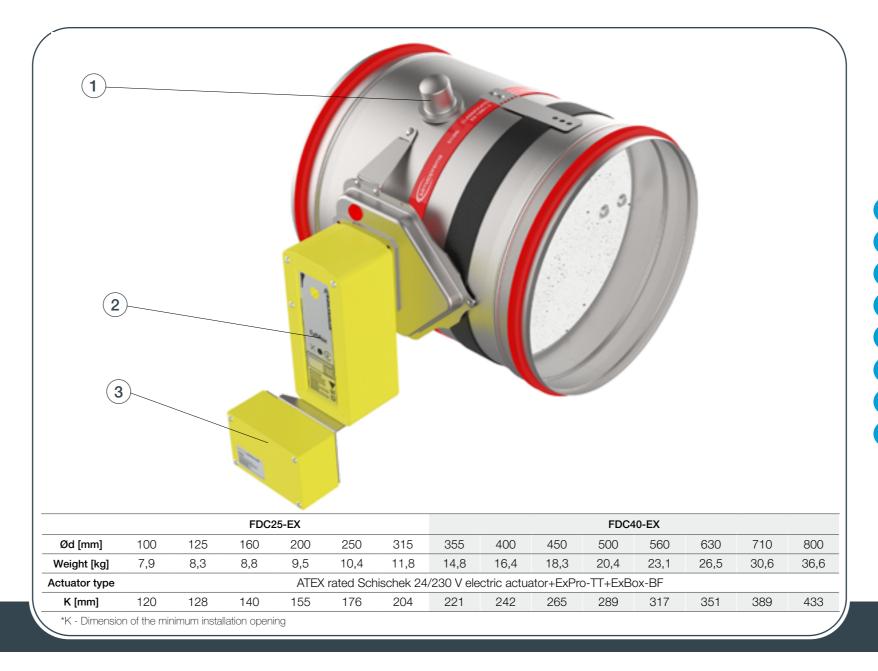



DIMENSIONS

FIRE DAMPER - FDC

PRODUCT OVERVIEW

COMMUNICATIONS MODULES

MAINTENANCE AND OPERATION

DIMENSIONS

ACTUATORS

ACCESSORIES

REPLACEMENTS

INSTALLATIONS

Ex classification of product:







For more information about Ex classification, visit website: ATEX classification!

Type Examination Certificate Number: FIDI 21 ATEX D059. Equipment complies with the essential health and safety requirements relating to the design and construction of equipment intended to use in potentially explosive atmospheres given in annex VIII of the directive ATEX 2014/34/EU.

Please consult latest Declaration of conformity on our

www.solid-air.com/downloads

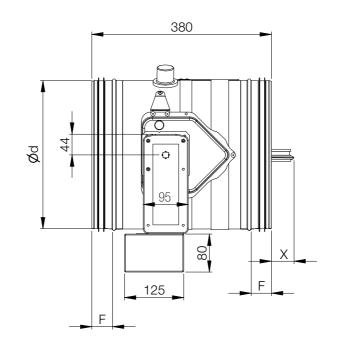

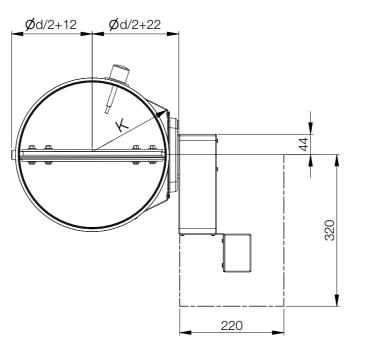

Model	F [mm]
FDC 25	42
FDC 40	42

Length of damper blade outside of casing (X dimension on front side):

X=(Ød/2)-110 [mm]

*If the damper is larger than Ø540, use formula (Y dimension on back side):



FDC25 - APP Applique installation frame

- Applique kit is an installation subframe for quick and easy installation in rigid and flexible walls
- Made out of calcium silicate boards
- Quick wall mounting with screws
- Factory assembled to the fire damper



FDC25-APP-R					FDC25-APP-EMS					FDC25-APP-M								
Ød [mm]	100	125	160	200	250	315	100	125	160	200	250	315	100	125	160	200	250	315
Weight [kg]	6,2	6,7	7,8	8,5	10,1	12,3	7,7	8,2	9,3	10	11,6	13,8	6,9	7,4	8,5	9,2	10,8	13

PRODUCT OVERVIEW

<u>DIMENSIONS</u>

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION


DIMENSIONS


Damper diameter Ød[mm]	Applique frame diameter Ød + A [mm]
100	Ød +105 mm
125 - 160	Ød + 95 mm
200 - 315	Ød + 80 mm


FIRE DAMPER - FDC


	Product	F [mm]
	FDC 25	42
	FDC 40	42
_		

FDC25-APP-R

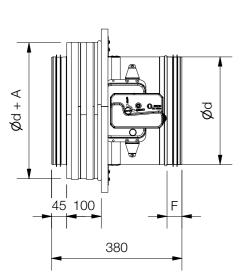


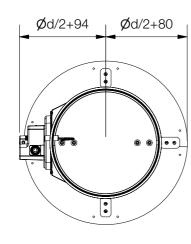

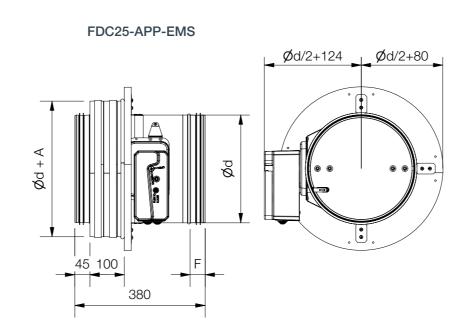

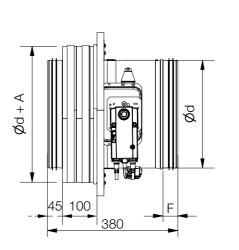

FDC25-APP-M

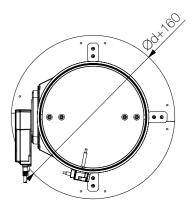




FDC25 - MF1 MF1 installation frame

 MF1 is an installation frame for quick and easy installation in rigid and flexible walls

Ød [mm]

- Made out of calcium silicate boards
- Quick wall mounting with screws
- Factory assembled to the fire damper

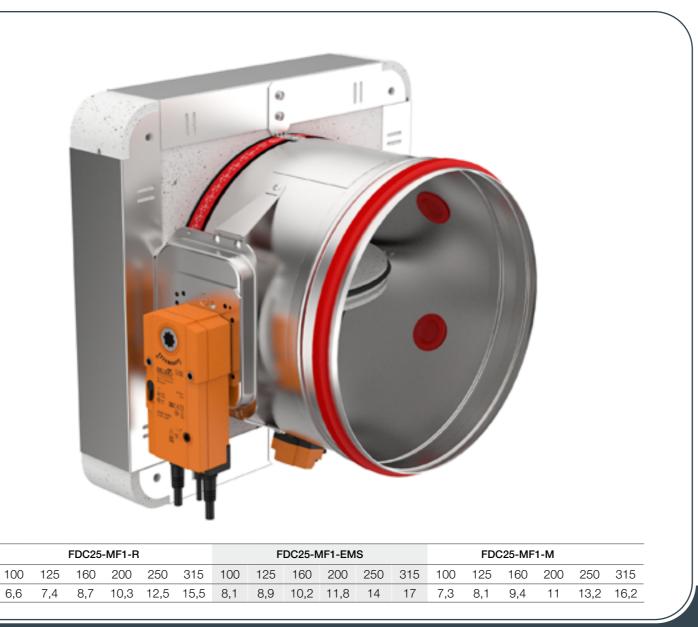

PRODUCT OVERVIEW

<u>DIMENSIONS</u>

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>


COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION




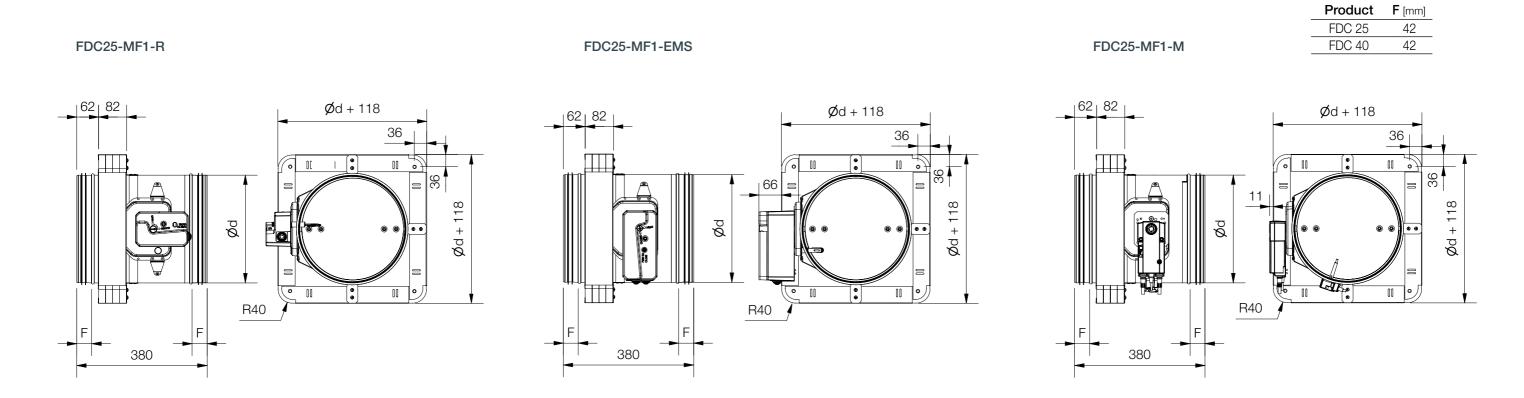



FDC25 - MF2 MF2 installation frame

- MF2 is an installation frame for quick and easy installation in rigid, flexible and shaft walls
- Made out of calcium silicate boards
- Quick wall mounting with screws
- Factory assembled to the fire damper

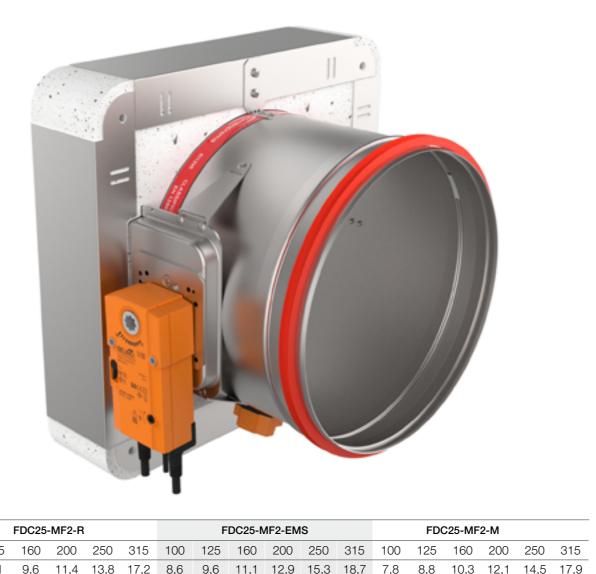

FDC25-MF2-R			FDC25-MF2-EMS				FDC25-MF2-M											
Ød [mm]	100	125	160	200	250	315	100	125	160	200	250	315	100	125	160	200	250	315
Weight [kg]	7,1	8,1	9,6	11,4	13,8	17,2	8,6	9,6	11,1	12,9	15,3	18,7	7,8	8,8	10,3	12,1	14,5	17,9

PRODUCT OVERVIEW

DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION


FIRE DAMPER - FDC

Product F [mm]

42


FDC 25

DIMENSIONS

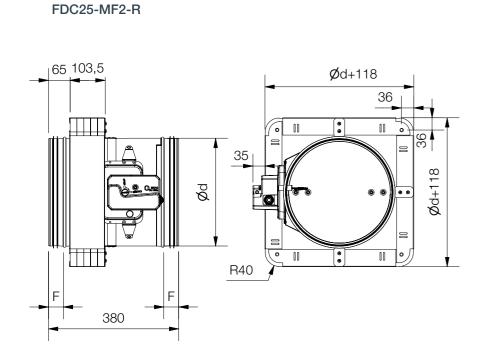

65 103,5 ϕ d + 118 R40 380


FDC25-MF2-EMS

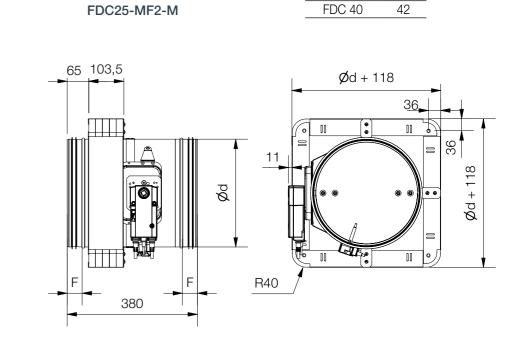



FDC40 - MF2 MF2 installation frame

- MF2 is an installation frame for quick and easy installation in rigid, flexible and shaft walls
- Made out of calcium silicate boards
- Quick wall mounting with screws
- Factory assembled to the fire damper

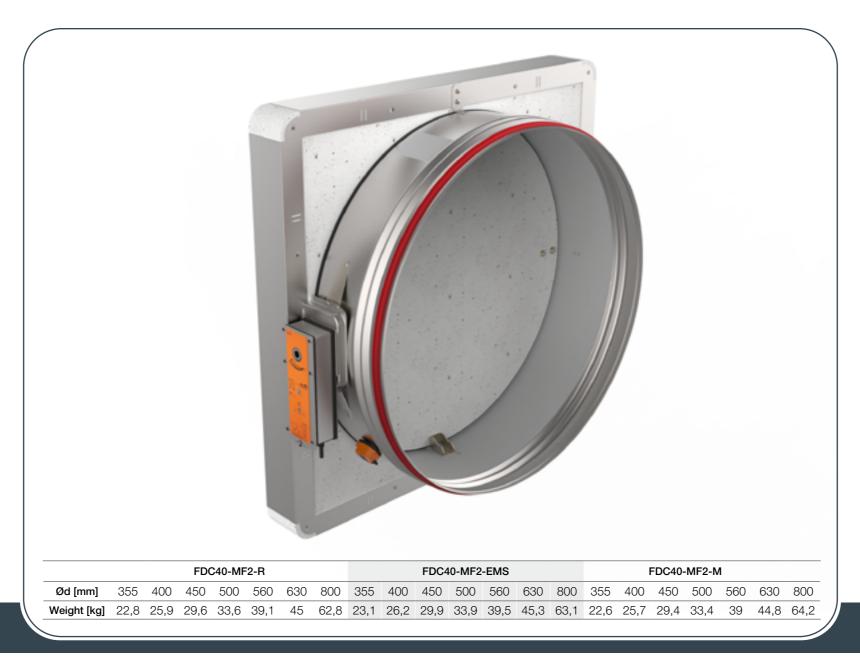

PRODUCT OVERVIEW

<u>DIMENSIONS</u>

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>


COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

DIMENSIONS

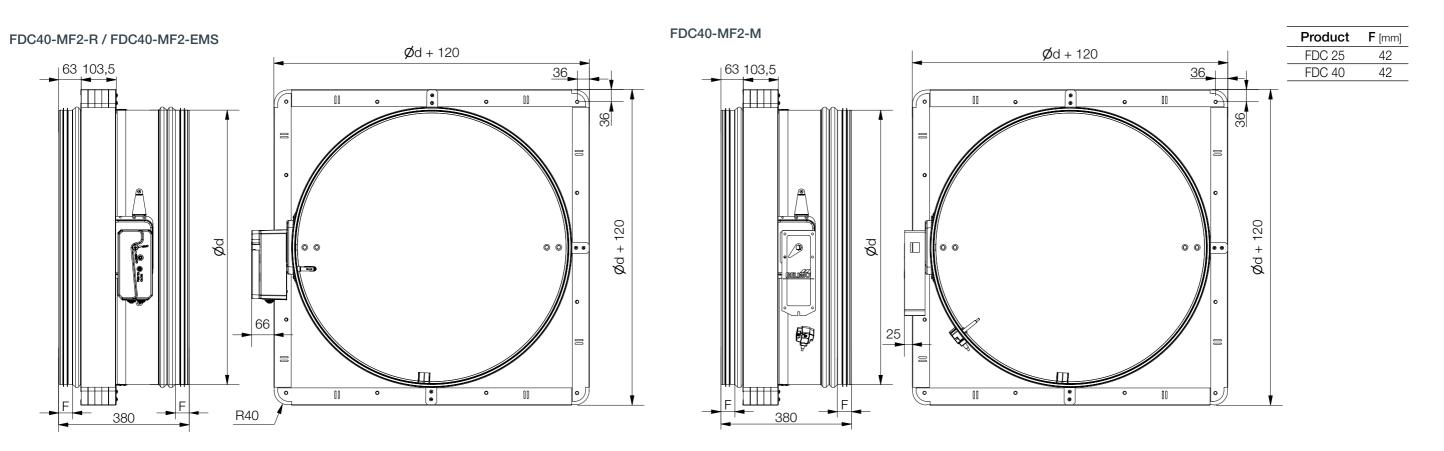



INSTALLATION

The FDC25/FDC40 fire damper is always tested in standardized support frames (both in a rigid wall and in a flexible wall) in accordance with EN 1366-2: 2015 table 3/4/5. The results obtained are valid for all similar support frames which have a thickness and/ or density and/or fire resistance similar or greater than the one on the test.





DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION



INSTALLATION

flexible connection on either end of the damper.


The duct connected to the fire damper must be supported or The gap in the installation opening between the fire damper The fire damper must be installed into a fire partition structure hung in such a way that the damper does not carry its weight. and the wall/ceiling can be increased by up to 50%, or The damper must not support any part of the surrounding decreased to the smallest dimension where there is sufficient room for installation of the seal! construction or wall which could cause damage and consequent

Recommended opening dimensions:

Damper size - Ød [mm]	Gap size - A (Recommended)	Opening size - Ød+2A (Recommended)
Ød ≤ 160	42,5 mm	Ød + 85 mm
$200 \le \emptyset d \le 315$	37,5 mm	Ød + 75 mm
$355 \le \varnothing d \le 450$	32,5 mm	Ød + 65 mm
Ød > 450	27,5 mm	Ød + 55 mm


Installation in both, vertical and horizontal axis of rotation of the dampers blade is acceptable (with the axis angle 0 - 360°).

in such a way that the damper blade in its closed position is located inside this structure (except for Applique/ MF1/ MF2 kit installations).

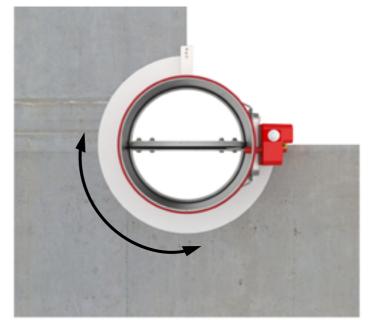

To help you find the suspension plane, a bendable fixing bracket is provided on the damper body (the use of bendable fixing brackets is not required to meet the classification) and the red tape is placed on the casing to mark the location of the wall limit (distance from wall limit to the end of fire damper is 220 mm). This does not apply for Applique/MF1/MF2 kit installations. Check the operation of the fire damper before commencing

FIRE DAMPER - FDC

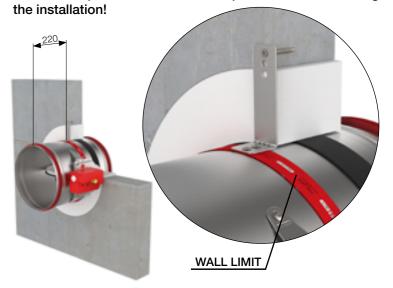

The damper driving mechanism can be placed on either side of the wall, however it needs to be placed so that it ensures an easy access during inspection.

• Mounting is possible with the blade axis in horizontal or in vertical position

damper failure. It is recommended to connect the damper to a

The installation must comply with the tests that were performed during certification

Avoid any obstruction of the moving blade by the connected

The class of air-tightness is maintained in case the installation of the damper is made in accordance with the technical manual

Operating temperature: 50 °C max

For indoor use only





PRODUCT OVERVIEW



DIMENSIONS



INSTALLATIONS



ACTUATORS



COMMUNICATIONS MODULES



ACCESSORIES



REPLACEMENTS



MAINTENANCE AND OPERATION



FDC25 ELECTRIC ACTUATOR



FDC40 ELECTRIC ACTUATOR



FDC EX ACTUATOR



FDC-R25 MANUAL ACTUATOR



FDC-R40/EMS MANUAL ACTUATOR



FDC-R40/EMS ACTUATOR (Ød < 316)






Range	Supporting construction	Wall thickness	Supporting construction details	Type of installation	Classification	Tested underpressure	Details	Construction type	Sealing type	
				Gypsum plaster / Mortar	El 120 (ve i↔o)S	500Pa	•			
	Rigid wall	≥ 100 mm	Aerated concrete (≥ 550kg/m³) Reinforced concrete (≥ 2200kg/m³)	Mineral wool and cover boards	FI 00 (to : a) C	500Pa			83	
			(33)	Fire Batt/ Weichschott	El 90 (ve i↔o)S	300Pa	•		689 689 669	
Ε		≥ 70 mm	Gypsum blocks (≥ 995kg/m³)	Gypsum plaster / Mortar and cover boards	El 120 (ve i↔o)S	500Pa	•			
d100-d800 mm	Flexible wall		A: Plasterboard type F (EN520), mineral wool up to	Gypsum plaster / Mortar and cover boards	A: El 120 (ve i↔o)S B: El 60 (ve i↔o)S	500Pa				
<u>6</u>	i lexible wall	≥ 100 mm	B: Plasterboard type A (EN520), mineral wool up to 60 kg/m³	Mineral wool and cover boards	A: El 90 (ve i↔o)S B: El 60 (ve i↔o)S	500Pa			E	
				mineral wool up to	mineral wool up to	Fire Batt/ Weichschott	A: El 90 (ve i↔o)S B: El 60 (ve i↔o)S	300Pa		
	Floor/ceiling	> 100 mm	Aerated concrete (≥ 550kg/m³)	Gypsum plaster / Mortar	El 120 (ho i↔o)S	500Pa		A		
	T loor/celling	2 100 111111	Reinforced concrete (≥ 2200kg/m³)	Fire Batt/ Weichschott	El 90 (ho i↔o)S	300Pa		A		
FRAME	Rigid wall	≥ 100 mm	Aerated concrete (≥ 550kg/m³) Reinforced concrete (≥ 2200kg/m³)	APPLIQUE (installation frame)	El 90 (ve i↔o)S	500Pa	•			
APP INSTALLATION FRAI d100-d315 mm	Florible "	≥ 70 mm	Gypsum blocks (≥ 995kg/m³)	APPLIQUE (installation frame)	El 90 (ve i↔o)S	500Pa	•	**************************************		
APP INS	Flexible wall	≥ 100 mm	Plasterboard type F (EN520)	APPLIQUE (installation frame)	El 90 (ve i↔o)S	500Pa	•			



Check for more information about certificate installations in the declaration of performance:



 www.solid-air.nl/downloads





Gypsum blocks (≥ 995 kg/m³) wall, more than 70 mm thick



Plasterboard wall, type F (EN520), Plasterboard wall, type A (EN520), more than 100 mm thick



Shaft wall, steel frame construction



Aerated concrete (≥ 550 kg/m³) or reinforced concrete (≥ 2200 kg/m³) ceiling / floor, more than 100 mm thick

installation



Gypsum plaster, mortar sealing or mortar and cover boards



Sealing with mineral wool and cover boards



Sealing with m fireproof coatin Weichschott Sealing with mineral wool and fireproof coating - FireBatt /



Applique kit installation



MF1/MF2 kit installation



Remote from wall installation


E .	Rigid wall	≥ 100 mm	Aerated concrete (≥ 550kg/m³) Reinforced concrete (≥ 2200kg/m³)	MF1/MF2 (installation frame)	FDC25:El 60 (ve i↔o)S FDC40:El 90 (ve i↔o)S	500Pa	•	
LATION FRAN 00-d315 mm i55-d800 mm		≥ 70 mm	Gypsum blocks (≥ 995kg/m³)	MF1/MF2 (installation frame)	FDC25:El 60 (ve i↔o)S FDC40:El 90 (ve i↔o)S	500Pa	•	
MF1/ MF2 INSTALLATION FRAME FDC25 MF1 d100-d315 mm FDC40 MF2 d355-d800 mm	Flexible wall	≥ 100 mm	Plasterboard A:type A (EN520) B:type F (EN520)	MF1/ MF2 (installation frame)	A:FDC25:El 60 (ve i↔o)S B:FDC40:El 90 (ve i↔o)S	500Pa	•	
MF1	Floor/ceiling	≥ 100 mm	Aerated concrete (≥ 550kg/m³) Reinforced concrete (≥ 2200kg/m³)	MF1/MF2 (installation frame)	FDC25:El120 (ho i↔o)S FDC40:El 90 (ho i↔o)S	300Pa	•	
MF2 INSTALLATION FRAME FDC25 MF2 d100-d315mm FDC40 MF2 d355-d800 mm	Flexible wall	≥ 90 mm	Shaft wall (steel frame)	MF2 (installation frame)	FDC25:El 90 (ve i↔o)S FDC40:El 90 (ve i↔o)S	500Pa		
ER 30 mm 0C40)	Flexible wall	_	Plasterboard type F (EN520)	- REMOTE FROM WALL				
ISOVER d100-d630 mm (only FDC40)	Rigid wall	≥ 100 mm	Aerated concrete (≥ 550kg/m³) Reinforced concrete (≥ 2200kg/m³)	(Isover)	El 60 (ve i↔o)S	300Pa		



Check for more information about certificate installations in the declaration of performance:



 www.solid-air.nl/downloads





Gypsum blocks (≥ 995 kg/m³) wall, more than 70 mm thick



Plasterboard wall, type F (EN520), Plasterboard wall, type A (EN520), more than 100 mm thick



Shaft wall, steel frame construction



Aerated concrete (≥ 550 kg/m³) or reinforced concrete (≥ 2200 kg/m³) ceiling / floor, more than 100 mm thick

INSTALLATION



Gypsum plaster, mortar sealing or mortar and cover boards



Sealing with mineral wool and cover boards



Sealing with r fireproof coati Weichschott Sealing with mineral wool and fireproof coating - FireBatt /



Applique kit installation



MF1/MF2 kit installation



Remote from wall installation




Rigid wall installation (mortar sealing)

The wall is composed of concrete blocks (minimum density of 550 kg/m³) or reinforced concrete (minimum density of 2200 kg/m³) and with a minimum thickness of 100 mm. Installation material is gypsum plaster or mortar **(C)**.





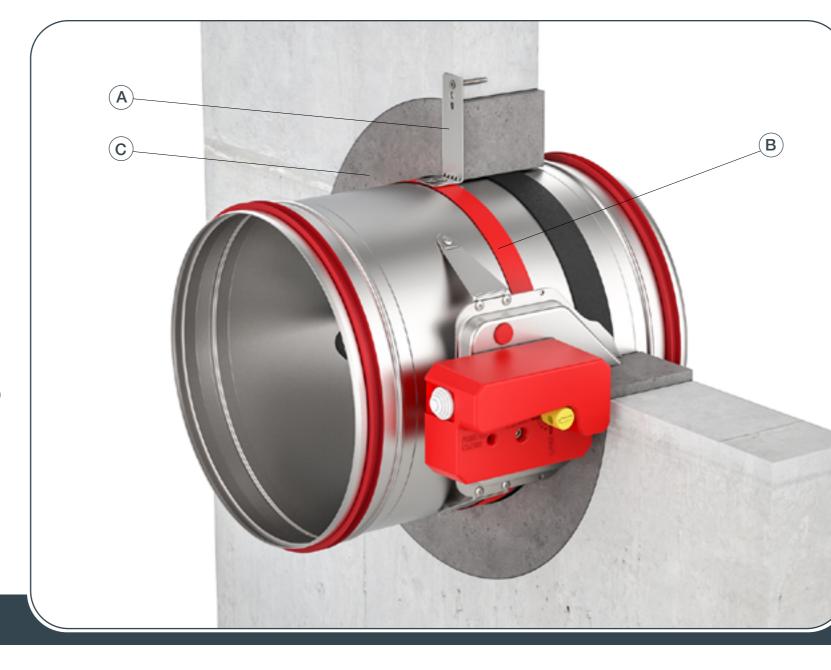









COMMUNICATIONS MODULES



 




Possible damper orientations





FIRE DAMPER - FDC




Damper blade must be closed during the installation!

- 2. Fix the damper to the wall using screws. Bracket screw hole is 6 mm in diameter.
- 3. Fill the space between the damper and the wall with gypsum plaster or mortar **(C)**.
- *Multiple fire dampers can be installed next to each other or ceiling/wall with the minimal distance of 30 mm between them, see page 38.

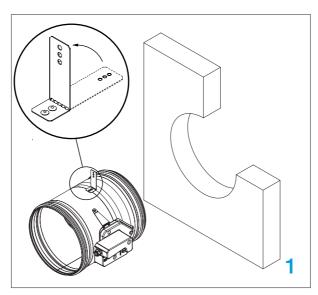

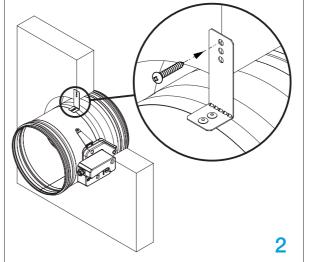

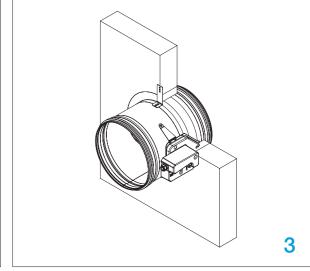




Rigid wall installation (mineral wool sealing)

 The wall is composed of concrete blocks (minimum density of 550 kg/m³) or reinforced concrete (minimum density of 2200 kg/m³) and with a minimum thickness of 100 mm. Installation material is mineral wool **(C)** (minimum density of 100 kg/m³) covered with plasterboard cover boards **(D)**.










Damper blade must be closed during the installation!

- 2. Fix the damper to the wall using screws. Bracket screw hole is 6 mm in diameter.
- 3. Fill the space between the damper and the wall with mineral wool **(C)**. Cover the mineral wool with GKF gypsum boards **(D)** (12,5 mm thick), fix them with screws.
- *Multiple fire dampers can be installed next to each other or ceiling/wall with the minimal distance of 30 mm between them, see page 38.

Test the operation of the damper blade!

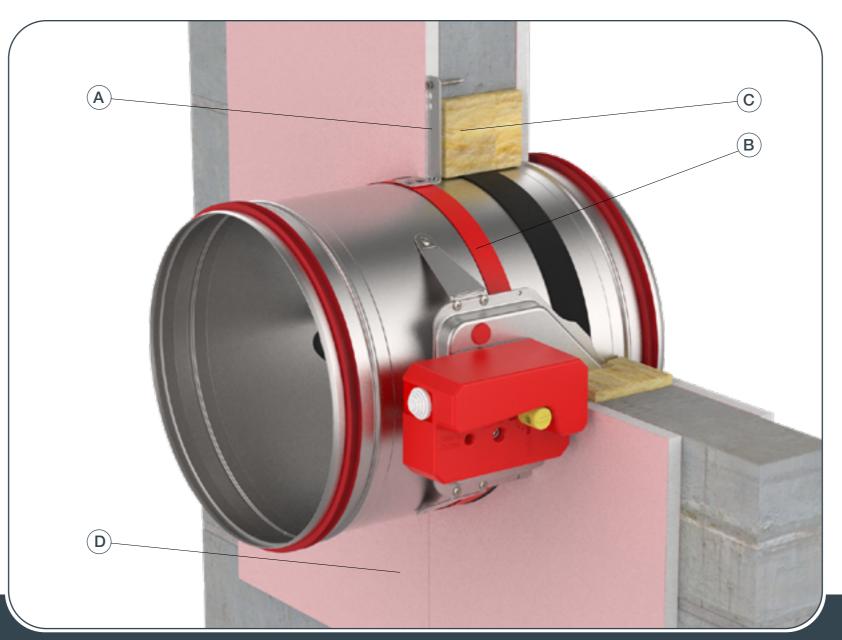




















Possible damper orientations



FD-A-CSP-BxH

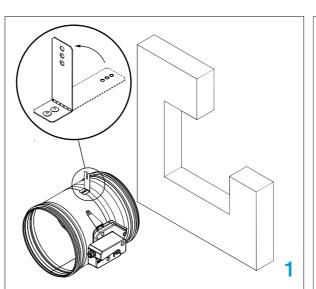

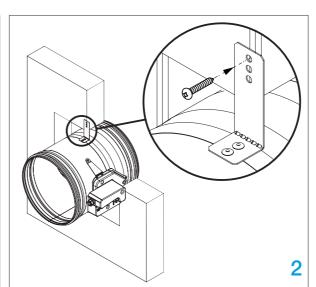

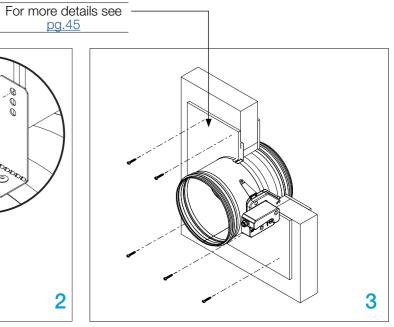




Rigid wall installation (Fire Batt/ Weichschott)

 The wall is composed of concrete blocks (minimum density of 550 kg/m³) or reinforced concrete (minimum density of 2200 kg/m³) and with a minimum thickness of 100 mm. Installation material: Mineral wool **(C)** (minimum density of 140 kg/m³), fire protection coating **(D)**.










Damper blade must be closed during the installation!

- 2. Close the space between casing and wall with two layers of mineral wool **(C)** (50 mm thick, coated on one side).
- 3. Seal the connections of mineral wool with intumescent fire resistant sealant **(D)**. Mineral wool and damper casing must be coated with 2 mm thick fire protection coating. Damper casing should be coated up to profile protrusions.
- *Multiple fire dampers can be installed next to each other or ceiling/wall with the minimal distance of 30 mm between them, see page 38.

Test the operation of the damper blade!

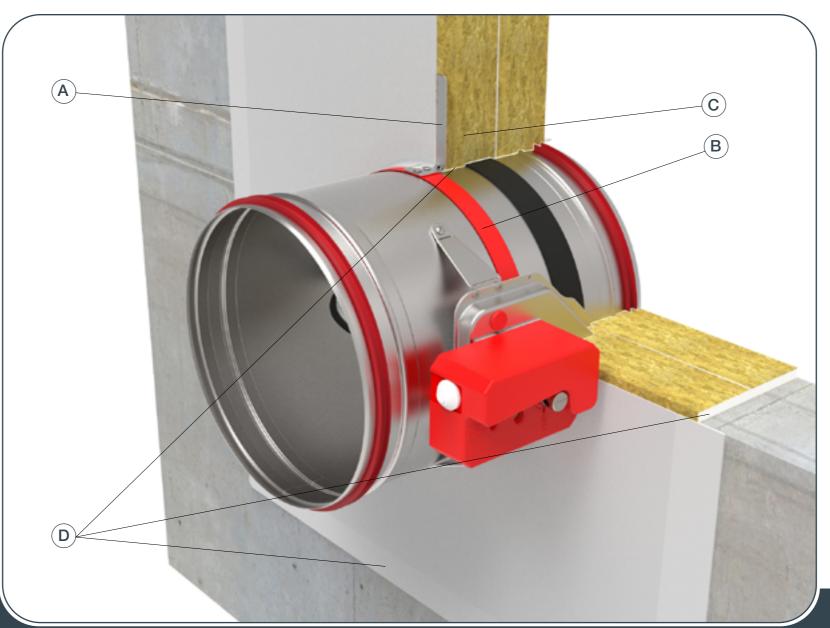




















Possible damper orientations



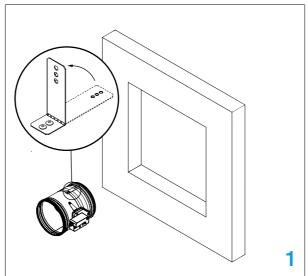

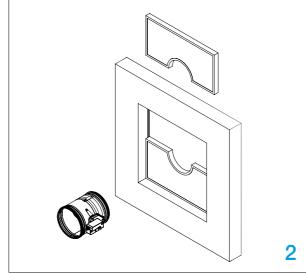

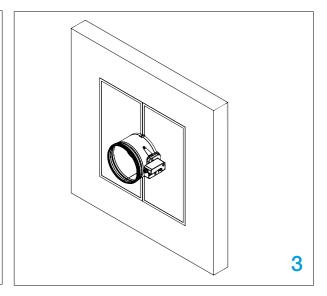




Gypsum blocks wall installation (mortar sealing)

 The wall is composed of gypsum blocks (minimum density of 995 kg/m³), with minimum thickness of 70 mm. Installation material is gypsum plaster or mortar **(C)** covered with plasterboard cover boards **(D)**.










Damper blade must be closed during the installation!

- 2. Fix the damper to the wall using screws (bracket screw hole is 6 mm in diameter).
- 3. Fill the space between the damper and the wall with mortar **(C)**. Cover the mortar with GKF gypsum boards **(D)** (12,5 mm thick), fix them with screws.
- *Multiple fire dampers can be installed next to each other or ceiling/wall with the minimal distance of 30 mm between them, see page 38.

Test the operation of the damper blade!

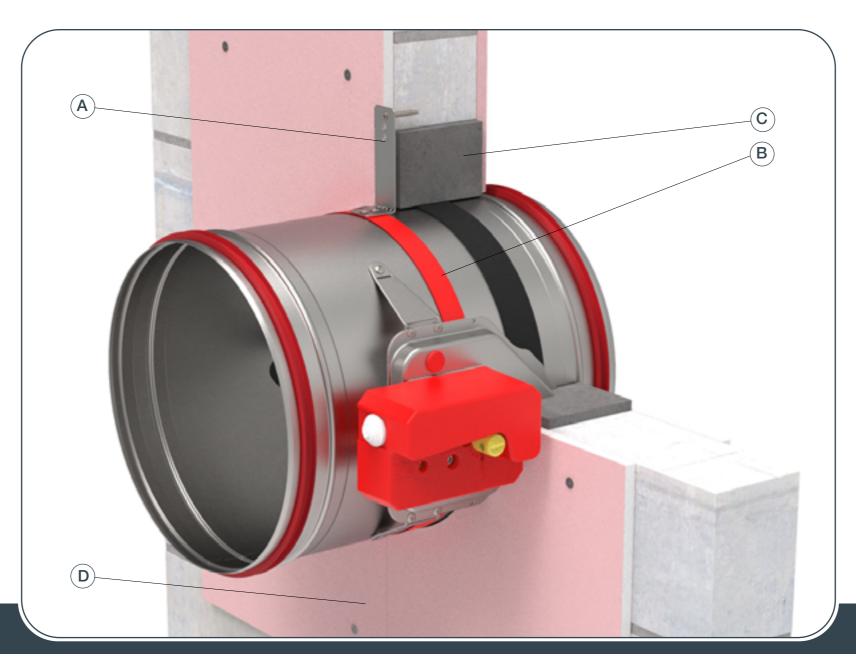




















Possible damper orientations



FD-A-CSP-BxH

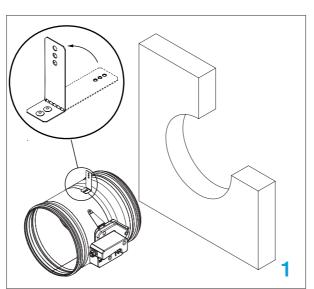

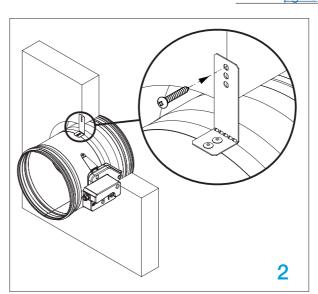

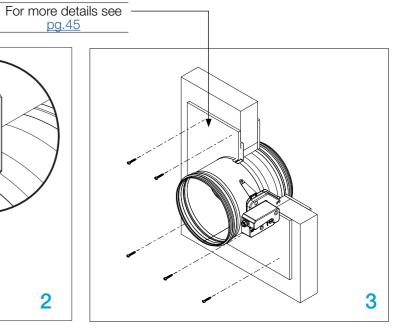



Flexible wall installation (mortar sealing)

The wall is composed of 2x2 plasterboard boards, 12,5 mm thick, installed on a steel frame construction. Installation material: gypsum plaster or mortar (**C**) covered with type F(**EI 120**) or type A(**EI 60**) cover boards (**D**). The minimum thickness of the wall is 100 mm

El 120 (ve i↔o)S

The wall is made out of type F (EN520) gypsum plaster boards. To fulfill the classification it is **NOT** mandatory to use the mineral wool inside the wall (mineral wool **(E)** with density up to 100 kg/m³ can be used).


El 60 (ve i↔o)S

The wall is made out of type A (EN520) gypsum plaster boards. To fulfill the classification it is **NOT** mandatory to use the mineral wool inside the wall





(mineral wool **(E)** with density up to 60 kg/m³ can be used).

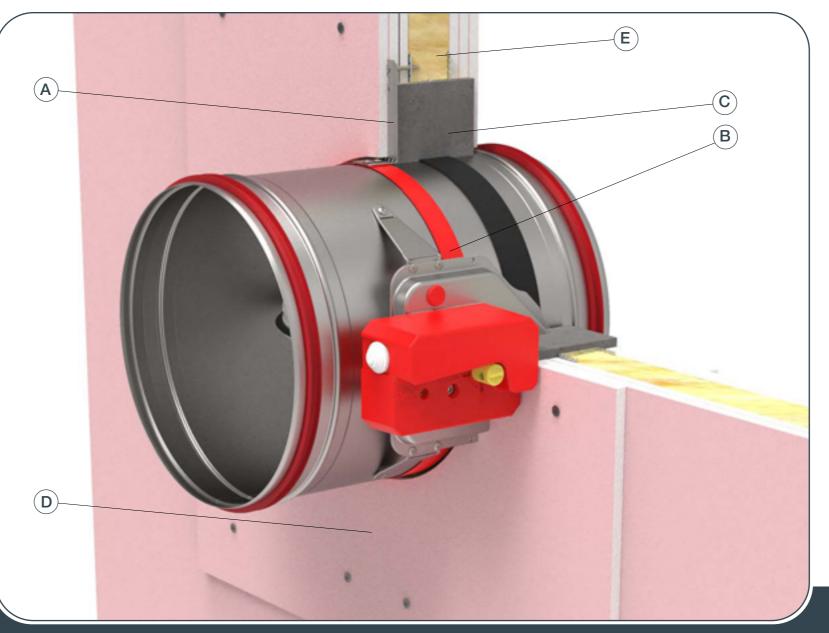

















Possible damper orientations



FD-A-CSP-BxH





RS INSTALLATION


1. Create an opening in the wall $(\emptyset d + 80 \text{ mm}) \times (\emptyset d + 80 \text{ mm})$ and build the subframe according to the drawing, see page 39. Bend the fixing bracket **(A)** 90°. Place the damper in the opening up to the wall limit mark **(B)** on the damper.

Damper blade must be closed during the installation!

- 2. Fix the damper to the wall using screws (bracket screw hole is 6 mm in diameter).
- 3. Fill the space between the damper and the wall with mortar **(C)**. Cover the mortar with GKF gypsum boards **(D)** (12,5 mm thick), fix them with self-tapping screws Ø3,5x45 mm.
- *Multiple fire dampers can be installed next to each other or ceiling/wall with the minimal distance of 30 mm between them, see page 38.

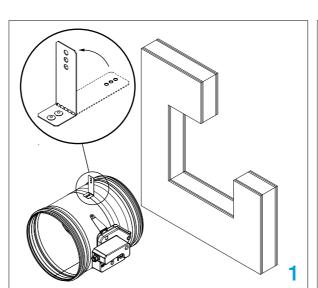

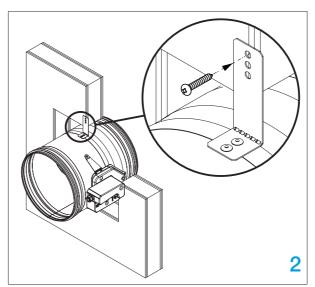

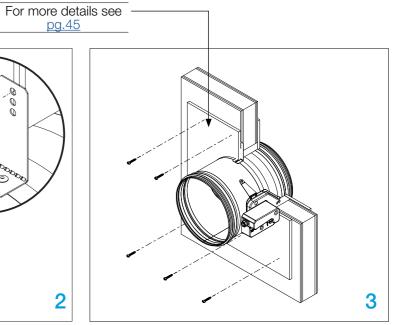



Flexible wall installation (mineral wool sealing) The wall is composed of 2x2 plas-

terboard boards.

12,5 mm thick, installed on a steel frame construction. Installation material: mineral wool (C) (minimum density of 100 kg/m³) covered with type F(**EI 120**) or type A (EI 60) cover boards (D).

The minimum thickness of the wall is 100 mm.

El 90 (ve i↔o)S

The wall is made out of type F (EN520) gypsum plaster boards. To fulfill the classification it is NOT mandatory to use the mineral wool inside the wall (mineral wool (E) with density up to 100 kg/m³ can be used).


EI 60 (ve i↔o)S

The wall is made out of type A (EN520) gypsum plaster boards. To fulfill the classification it is NOT mandatory to use the mineral wool inside the wall (mineral wool (E) with density up to 60 kg/m³ can be





INSTALLATION

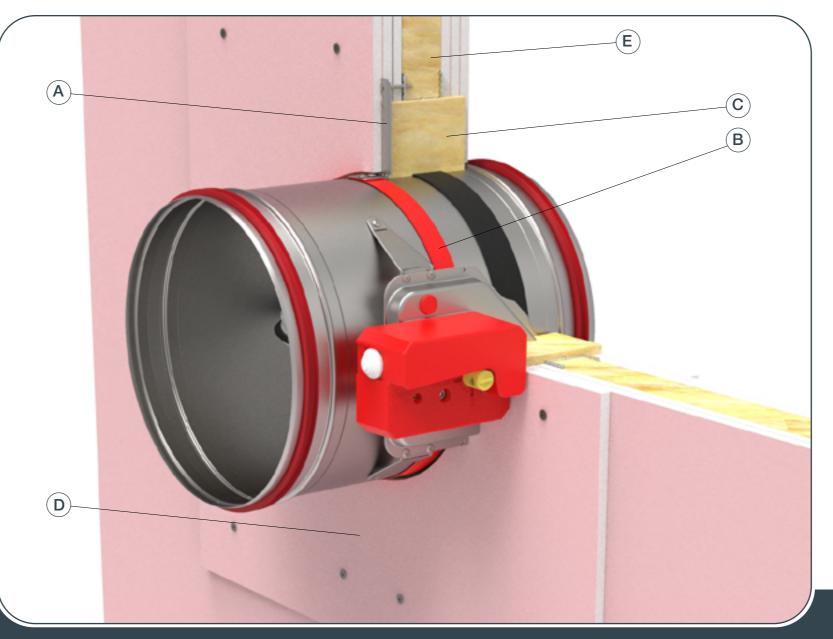



DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

 
MAINTENANCE AND OPERATION

Possible damper orientations




FD-A-CSP-BxH


FIRE DAMPER - FDC




Damper blade must be closed during the installation!

- 2. Fix the damper to the wall using screws (bracket screw hole is 6 mm in diameter).
- 3. Fill the space between the damper and the wall with mineral wool (C). Cover the mineral wool with GKF gypsum boards (D) (12,5 mm thick), fix them with self-tapping screws Ø3,5x45 mm.
- *Multiple fire dampers can be installed next to each other or ceiling/wall with the minimal distance of 30 mm between them, see page 38.

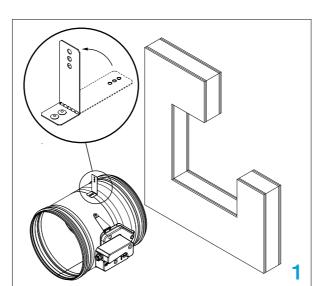

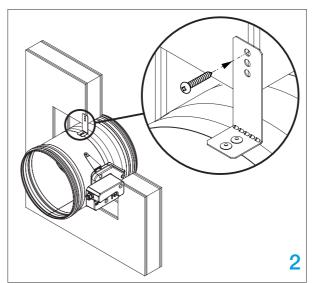

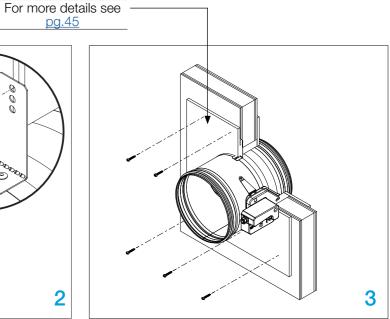



Flexible wall installation (Fire Batt/ Weichschott)

The wall is composed of 2x2 plasterboard boards, 12,5 mm thick, installed on a steel frame construction.

El 90 (ve i↔o)S

The wall is made out of type F (EN520) gypsum plaster boards. To fulfill the classification it is **NOT** mandatory to use the mineral wool inside the wall (mineral wool (E) with density up to 100 kg/m³ can be used). Installation material: mineral wool (C) (minimum density of 140 kg/m³) and fire protection coating (D). The minimum thickness of the wall is 100 mm.


El 60 (ve i↔o)S

The wall is made out of type A (EN520) gypsum plaster boards. To fulfill the classification it is **NOT** mandatory to use the mineral wool inside the wall (mineral wool (E) with density up to 60 kg/m³ can be used). Installation





material: mineral wool (C (minimum density of 140 kg/m³) and fire protection coating (D). The minimum thickness of the wall is 100 mm.

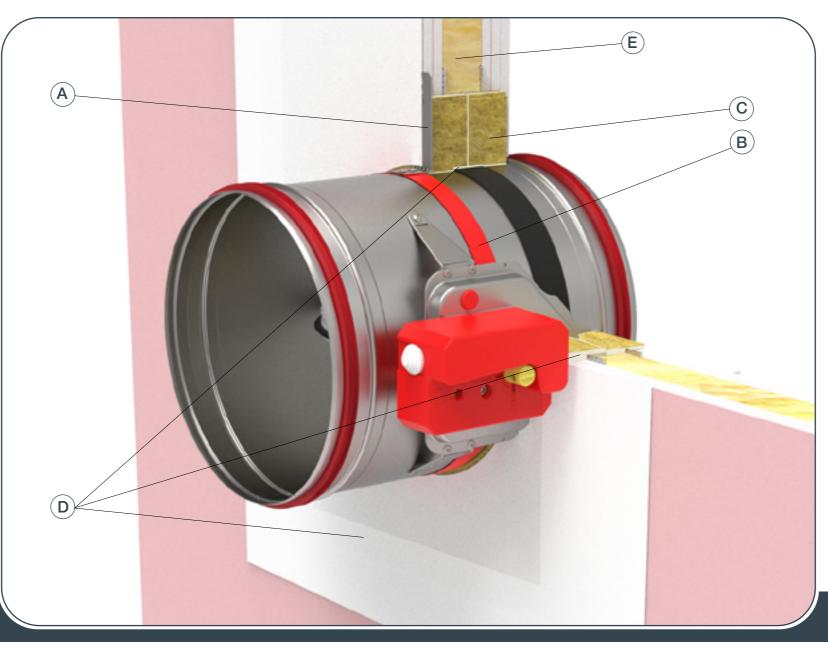

















Possible damper orientations









INSTALLATION


- 1. Create an opening in the wall $(\emptyset d + 300 \text{ mm}) \times (\emptyset d + 300 \text{ mm})$ and build the subframe according to the drawing, see page 39. Bend the fixing bracket (A) 90°.
- 2. Place the damper in the opening up to the wall limit mark **(B)** on the damper.

Damper blade must be closed during installation!

- 3. Close the space between casing and wall with two layers of mineral wool (C) (50 mm thick, coated on one side). Seal the connections of mineral wool with intumescent fire resistant sealant (D). Mineral wool and damper casing must be coated with 2 mm thick fire protection coating. Damper casing should be coated up to profile protrusions.
- *Multiple fire dampers can be installed next to each other or ceiling/wall with the minimal distance of 30 mm between them, see page 38.

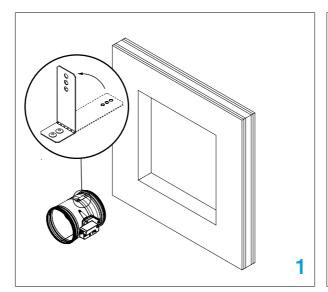

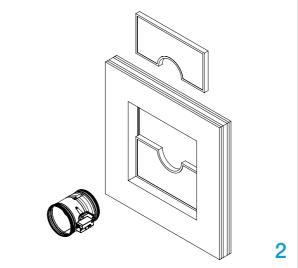

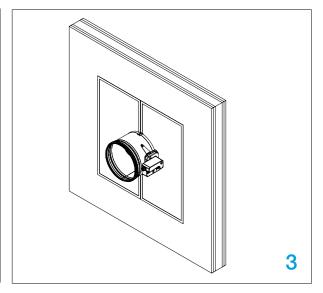




Rigid floor/ceiling installation (mortar sealing)

The floor/ceiling is composed of concrete blocks (minimum density of 550 kg/m³) or reinforced concrete (minimum density of 2200 kg/m³) and with a minimum thickness of 100 mm. Installation material is gypsum plaster or mortar **(C)**.





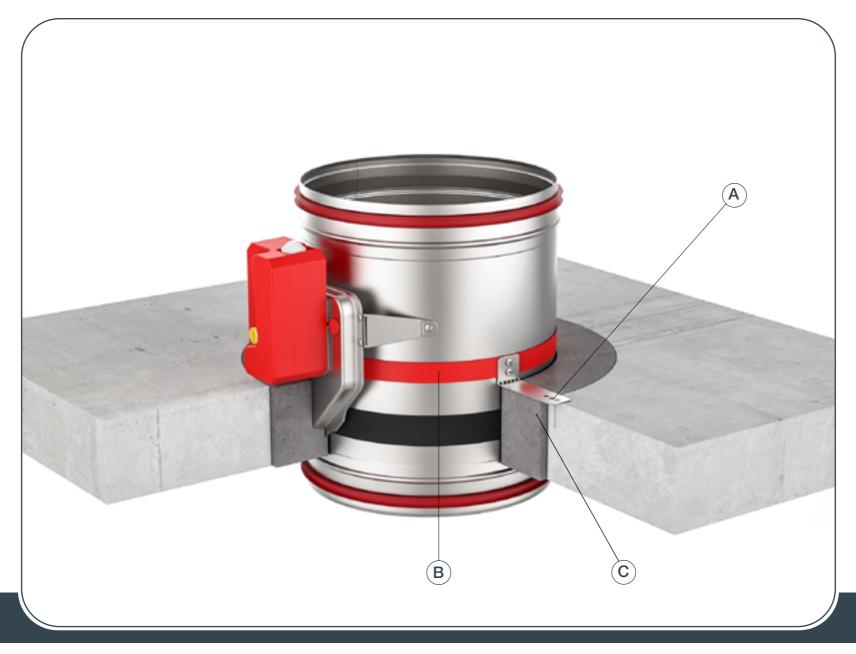


















Possible damper orientations



 
FIRE DAMPER - FDC





Damper blade must be closed during installation!


2. Fix the damper to the slab using screws (bracket screw hole is 6 mm in diameter).

3/3*. Fill the space between the damper and the slab with mortar **(C)** or gypsum plaster.

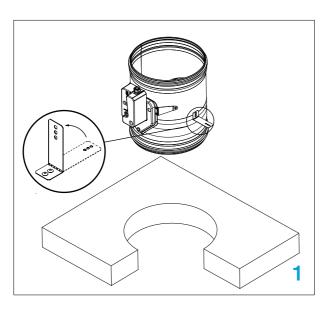

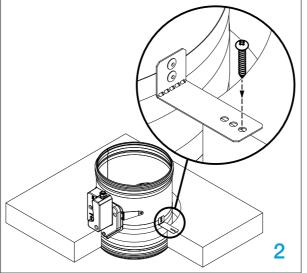

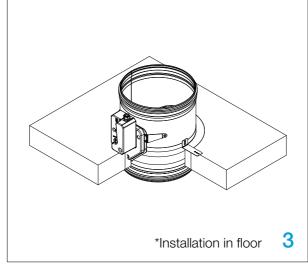

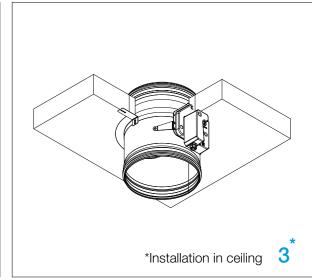



Rigid floor/ceiling installation (Fire Batt/ Weichschott)

The floor/ceiling is composed of concrete blocks (minimum density of $550~kg/m^3$) or reinforced concrete (minimum density of $2200~kg/m^3$) and with a minimum thickness of 100~mm. Installation material: Mineral wool **(C)** (minimum density of $140~kg/m^3$), fire protection coating **(D)**.










- 1. Create an opening in the floor/ceiling $(\emptyset d + 300 \text{ mm}) \times (\emptyset d + 300 \text{ mm})$. Bend the fixing bracket **(A)** 90°.
- 2. Place the damper in the opening up to the wall limit mark **(B)** on the damper. Close the space between casing and floor/ceiling with two layers of mineral wool **(C)** (50 mm thick, coated on one side).

Damper blade must be closed during installation!

3/3*. Connections of mineral wool should be sealed with intumescent fire resistant sealant **(D)**. Mineral wool and damper casing must be coated with 2 mm thick fire protection coating. Damper casing should be coated up to profile protrusions.

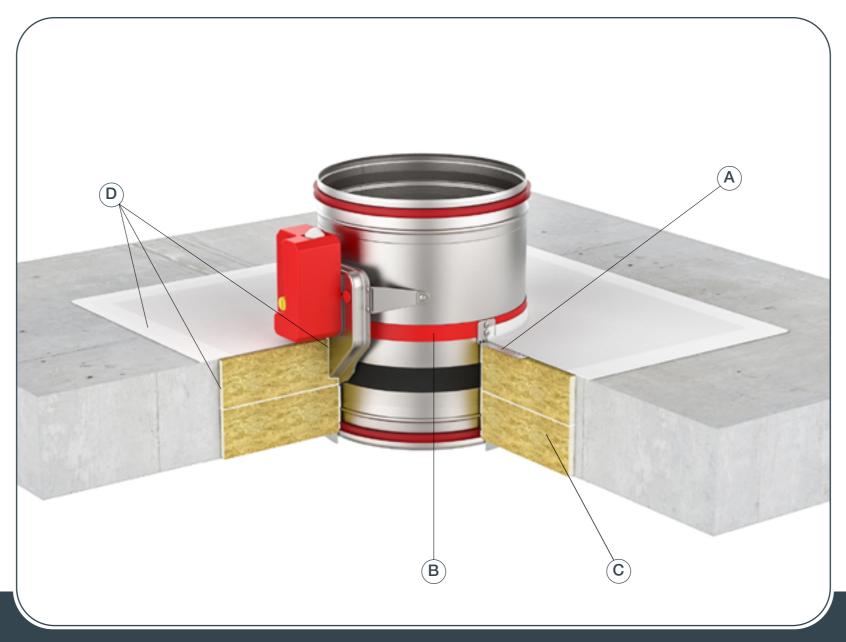



- PRODUCT OVERVIEW
- <u>DIMENSIONS</u>
- <u>INSTALLATIONS</u>
- <u>ACTUATORS</u>
- COMMUNICATIONS MODULES
- ACCESSORIES
- REPLACEMENTS
- MAINTENANCE AND OPERATION


Possible damper orientations




 
FIRE DAMPER - FDC



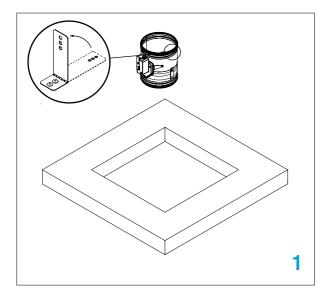

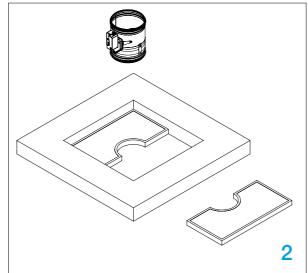

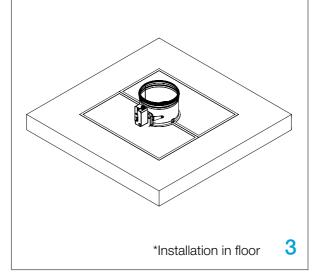

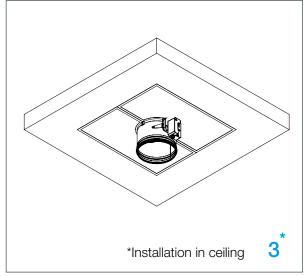



Suspension for rigid floor installation


Suspension systems are required for the Fire Batt/ Weichschott installation of the fire damper with mineral wool in floor slabs. Fire dampers can be suspended from solid ceiling slabs using adequately sized threaded rods. Load the suspension system only with the weight of the fire damper. Ducts must be suspended separately.





- 1. Suspension strut should be connected with drop rods (8/10 mm) to the floor slab above. It is used to support the damper and ease the installation.
- 2. When using L profile fixation, support steel C profile with 50 mm high peace of aerated concrete or similar rigid material. Not necessary if connecting rods directly to damper.
- 3. Damper casing is fixed to suspended and supported steel C profiles by two self tapping screws 4,8x16 (make sure that it doesn't interfere with damper blade) with L profile hanger (detail A) fixed to steel C profiles by M8 screw and nut. Position of self-tapping screws is trough the middle of damper casing.
- 4. To finish the installation please follow the steps (2.-4.) from page 26.

Damper blade must be closed during installation! Test the operation of the damper blade!

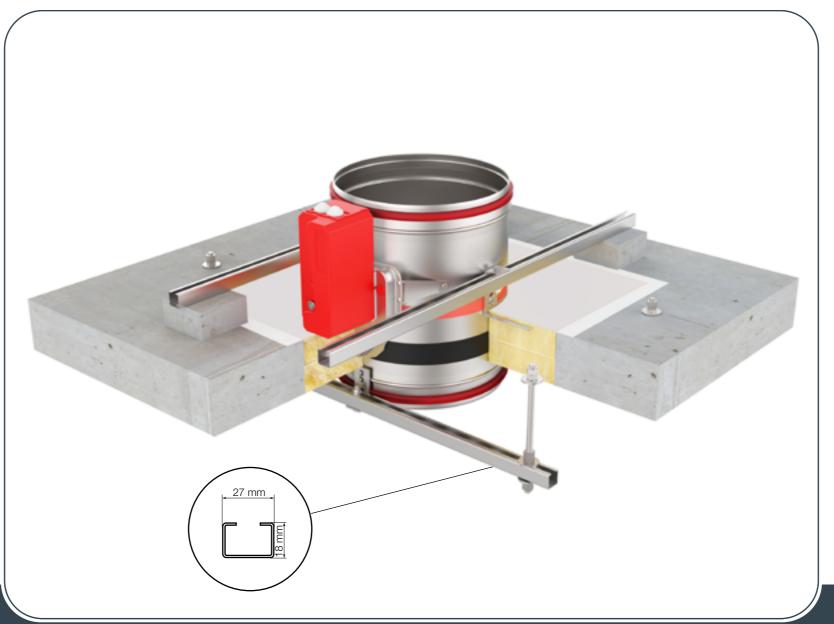









COMMUNICATIONS MODULES





REPLACEMENTS


MAINTENANCE AND OPERATION


Possible damper orientations



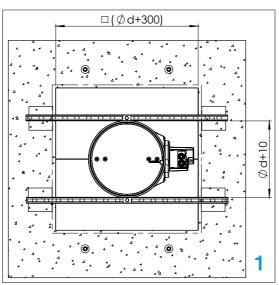

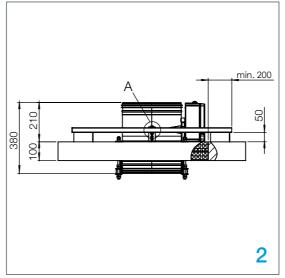

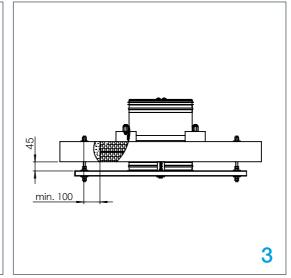

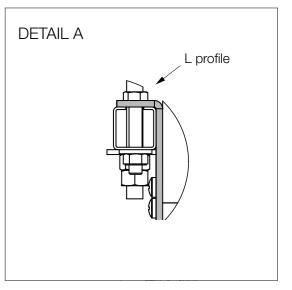



Suspension for rigid ceiling installation


Suspension systems are required for the Fire Batt/ Weichschott installation of the fire damper with mineral wool in ceiling slabs. Fire dampers can be suspended from solid ceiling slabs using adequately sized threaded rods. Load the suspension system only with the weight of the fire damper. Ducts must be suspended separately.





- 1. Suspension strut should be connected with drop rods (8/10 mm) to the ceiling slab above. It is used to support the damper and ease the installation.
- 2. If using L profile fixation, support steel C profile with 50 mm high peace of aerated concrete or similar rigid material. Not necessary if connecting rods directly to damper.
- 3. Damper casing is fixed to suspended and supported steel C profiles by two self tapping screws 4,8x16 (make sure that it doesn't interfere with damper blade) with L profile hanger (detail A) fixed to steel C profiles by M8 screw and nut. Position of self-tapping screws is trough the middle of damper casing.
- 4. To finish the installation please follow the steps (2.-4.) from page 26.

Damper blade must be closed during installation! Test the operation of the damper blade!

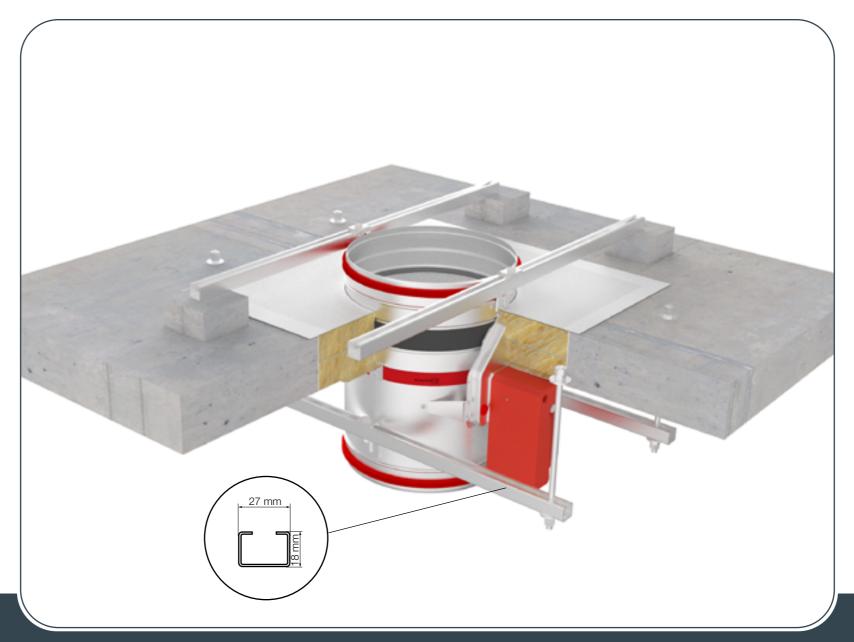





















Possible damper orientations



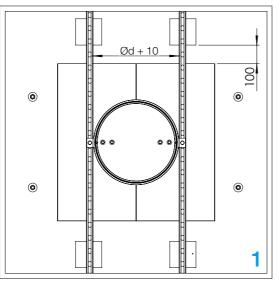

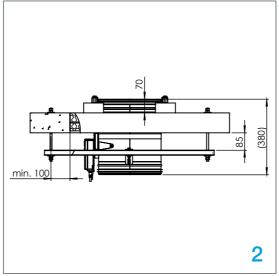

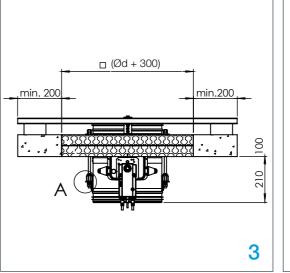

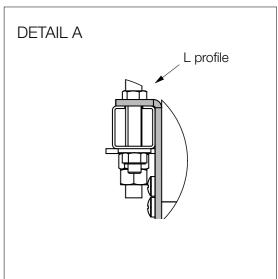



Rigid wall installation Applique installation frame

The wall is composed of concrete blocks (minimum density of 550 kg/m³) or reinforced concrete (minimum density of 2200 kg/m³) and with a minimum thickness of 100 mm.











<u>INSTALLATIONS</u>

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

 
REPLACEMENTS

MAINTENANCE AND OPERATION

Possible damper orientations




FIRE DAMPER - FDC




2. Insert fire damper into wall and fasten with screws (8 pcs, 4,8x60 mm).

Damper blade must be closed during installation!

	Wall opening dimensions	
Damper diameter Ød [mm]	Applique frame diameter ØD [mm]	Wall opening [mm]
100	Ød + 105 mm	Ød + 115 mm
125-180	Ød + 95 mm	Ød + 105 mm
200-315	Ød + 80 mm	Ød + 90 mm

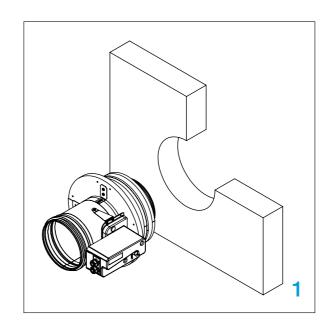

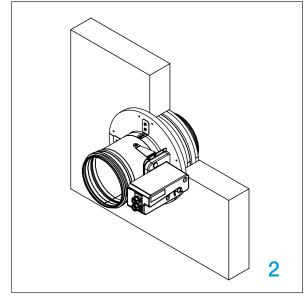




Gypsum blocks wall installation Applique installation frame

The wall is composed of gypsum blocks (minimum density of 995 kg/m³), and with minimum thickness of 70 mm.





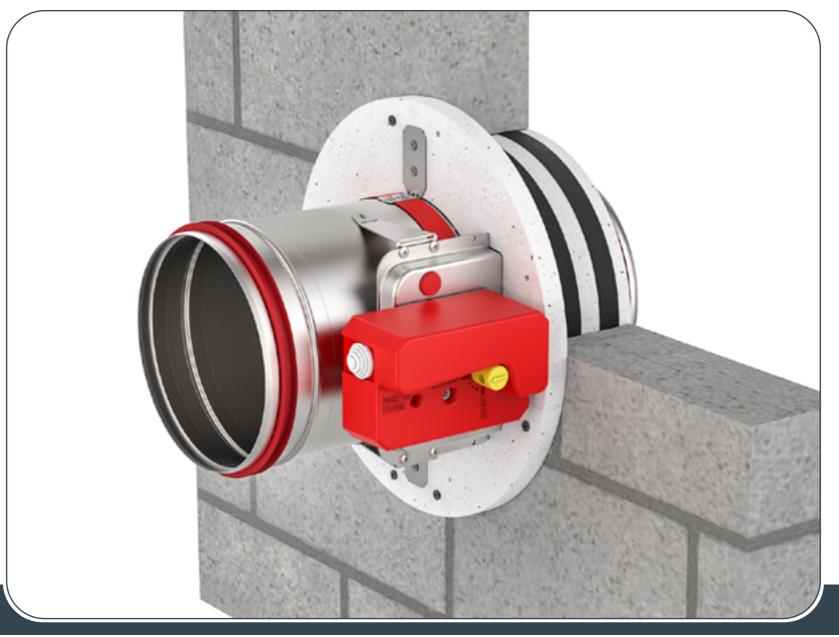



DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

Possible damper orientations





FIRE DAMPER - FDC

- 1. Create a wall opening according to the dimensions in the table below.
- 2. Insert fire damper into wall and fasten with screws (8 pcs, 4,8x60 mm).

Damper blade must be closed during installation!

	Wall opening dimensions	
Damper diameter Ød [mm]	Applique frame diameter ØD [mm]	Wall opening [mm]
100	Ød + 105 mm	Ød + 115 mm
125-180	Ød + 95 mm	Ød + 105 mm
200-315	Ød + 80 mm	Ød + 90 mm

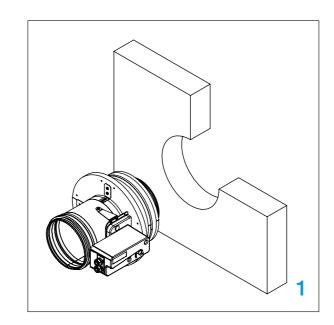

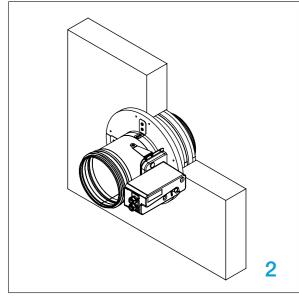



Flexible wall installation

Applique installation frame


The wall is composed of 2x2 plasterboard boards, 12,5 mm thick, installed on a steel frame construction. To fulfill the classification it is **NOT** mandatory to use the mineral wool inside the wall (mineral wool with density up to 100 kg/m^3 can be used). The minimum thickness of the wall is 100 mm.







INSTALLATION

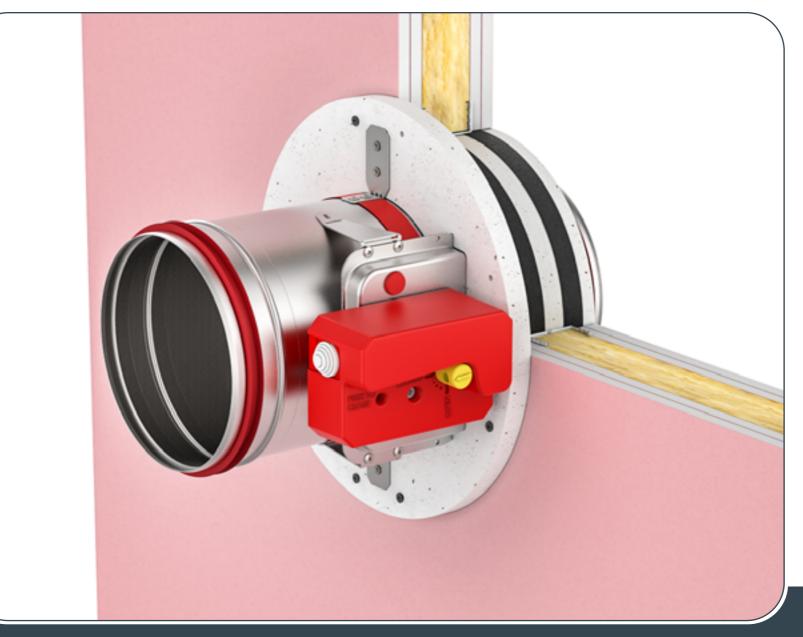



DIMENSIONS

INSTALLATIONS

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

 
REPLACEMENTS

MAINTENANCE AND OPERATION

Possible damper orientations



FIRE DAMPER - FDC





1. Place the fire damper in the opening.

Damper blade must be closed during installation!

2. Fasten the fire damper with screws (8 pcs, 4,8x60 mm).

Wall opening dimensions							
Damper diameter Ød [mm]	Applique frame diameter ØD [mm]	Wall opening [mm]					
100	Ød + 105 mm	Ød + 115 mm					
125-180	Ød + 95 mm	Ød + 105 mm					
200-315	Ød + 80 mm	Ød + 90 mm					

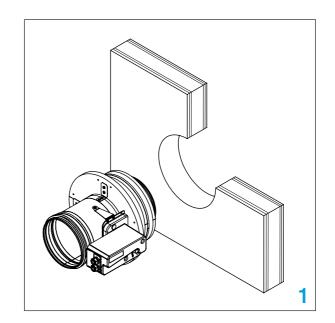

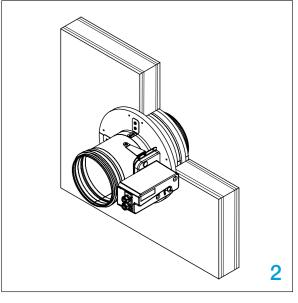



Rigid wall installation MF1/MF2 installation frame


The wall is composed of concrete blocks (minimum density of 550 kg/m³) or reinforced concrete (minimum density of 2200 kg/m³) and with a minimum thickness of 100 mm.









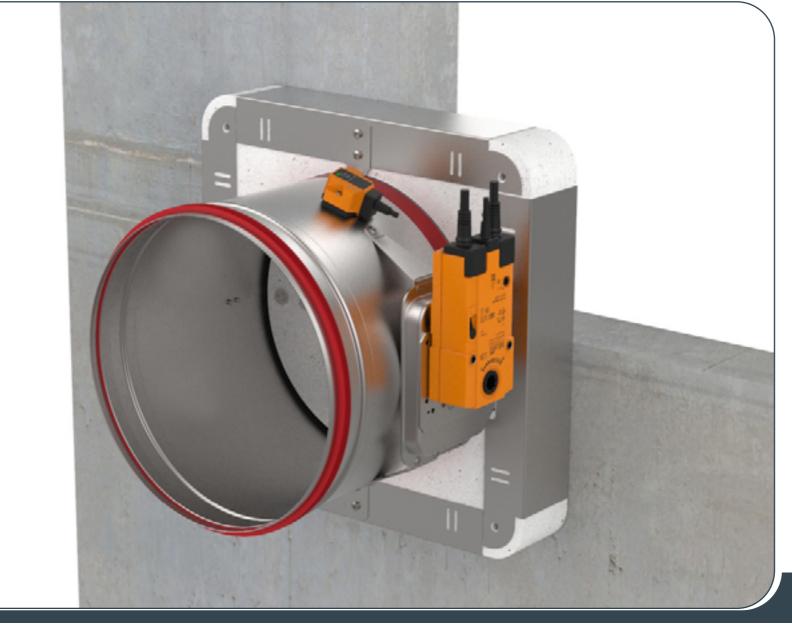



DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

 
REPLACEMENTS

MAINTENANCE AND OPERATION

Possible damper orientations




FIRE DAMPER - FDC





2. Place the damper in the opening.

Damper blade must be closed during installation!

3. Fasten the fire damper with screws FDC25-4 pcs, 6x140 mm, FDC40- 12 pcs, 6x140 mm.

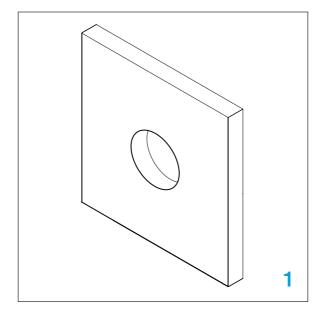

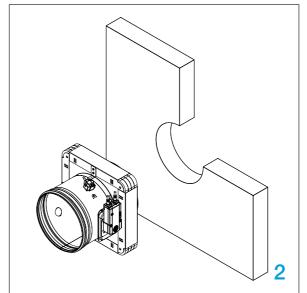

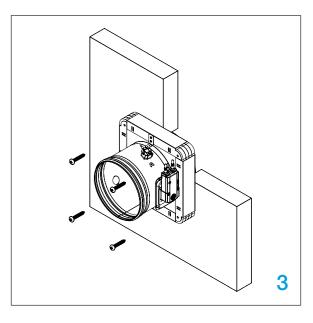




Gypsum blocks wall MF1/MF2 installation frame

The wall is composed of gypsum blocks (minimum density of 995 kg/m³) and with minimum thickness of 70 mm.





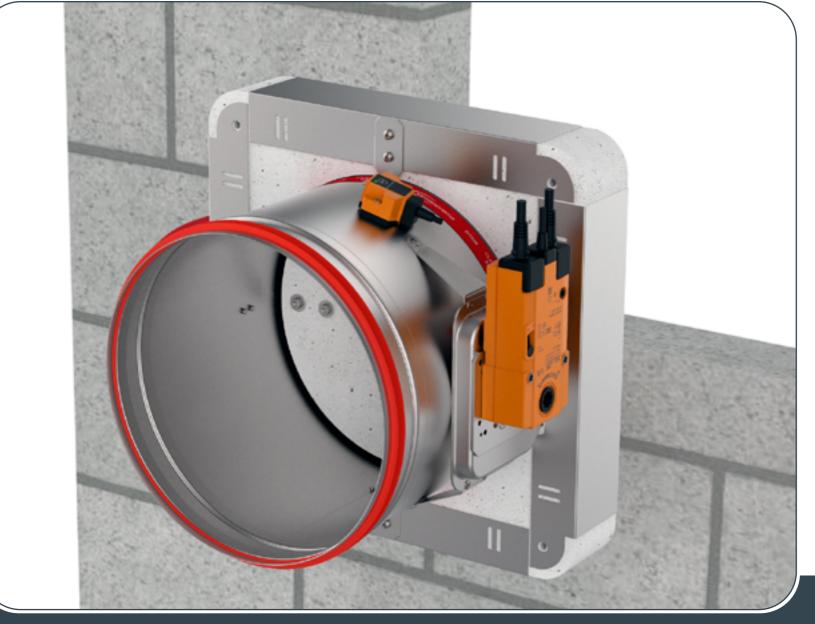

- PRODUCT OVERVIEW
- <u>DIMENSIONS</u>
- <u>INSTALLATIONS</u>
- <u>ACTUATORS</u>
- COMMUNICATIONS MODULES
- ACCESSORIES
- REPLACEMENTS
- MAINTENANCE AND OPERATION

Possible damper orientations





FIRE DAMPER - FDC


- 1. Create an opening in the wall (FDC25- Ød +10 mm, FDC40-Ød + 25 mm).
- 2. Place the damper in the opening.

Damper blade must be closed during installation!

3. Fasten the fire damper with screws FDC25- 4 pcs, 6x140 mm, FDC40- 12 pcs, 6x140 mm.

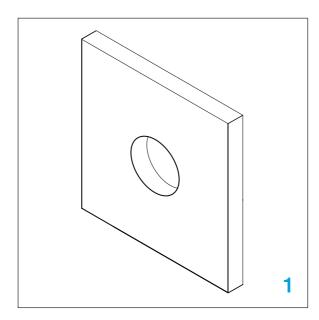

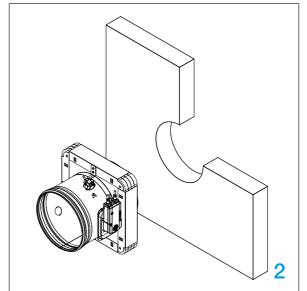

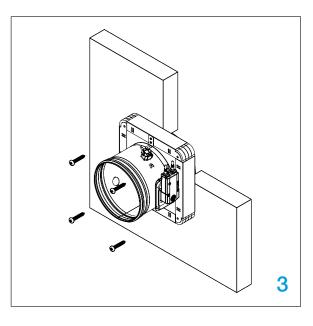



Flexible wall installation MF1/MF2 installation frame

MF1 (El 60 (ve i↔o)S)

The wall is made out of type A (EN520) gypsum plaster boards. To fulfill the classification it is **NOT** mandatory to use the mineral wool inside the wall (mineral wool with density up to $60~{\rm kg/m^3}$ can be used). The minimum thickness of the wall is $100~{\rm mm}$.


MF2 (El 90 (ve i↔o)S)

The wall is made out of type F (EN520) gypsum plaster boards, installed on a steel frame construction. To fulfill the classification it is **NOT** mandatory to use the mineral wool inside the wall (mineral wool with density up to 100 kg/m³ can be used). The minimum thickness of the wall is 100 mm.







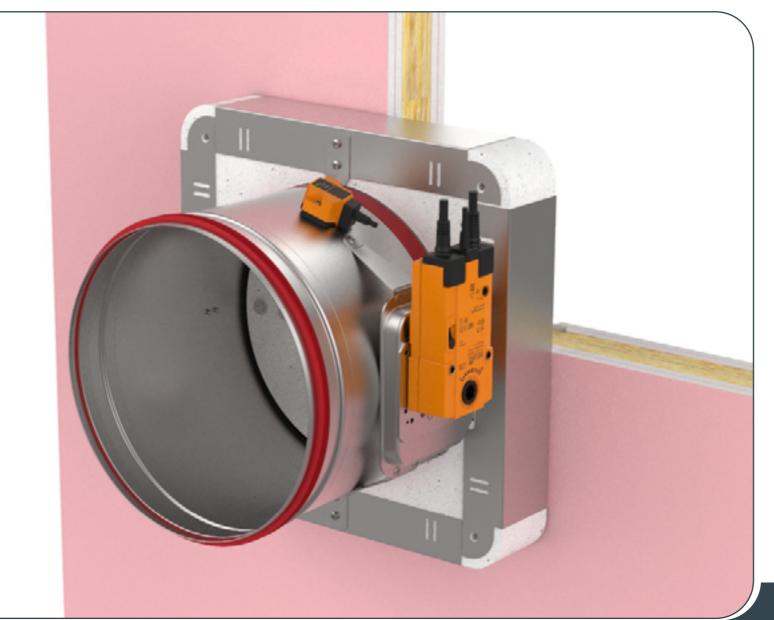













REPLACEMENTS

MAINTENANCE AND OPERATION

Possible damper orientations




FIRE DAMPER - FDC





2. Place the fire damper in the opening.

Damper blade must be closed during installation!

3. Fasten the fire damper with screws FDC25- 4 pcs, 6x140 mm, FDC40- 12 pcs, 6x140 mm.

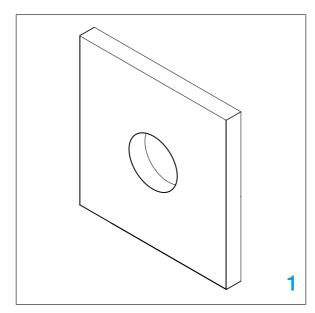

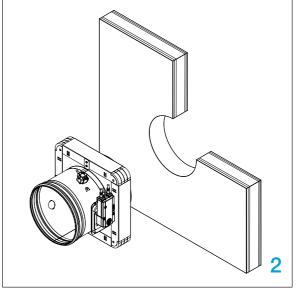

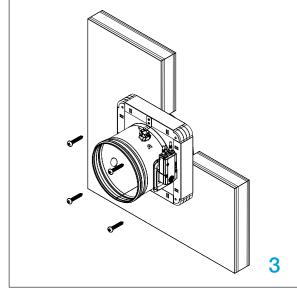



Rigid floor/ceiling installation MF1/MF2 installation frame

The floor/ceiling is composed of concrete blocks (minimum density of 550 kg/m³) or reinforced concrete (minimum density of 2200 kg/m³) and with a minimum thickness of 100 mm.








INSTALLATION

- 1. Create an opening in the floor/ceiling (FDC25- \varnothing d +10 mm, FDC40- \varnothing d + 25 mm). Insert the fire damper into the opening and mark the places for drilling holes.
- 2. Remove the fire damper and drill the marked places (8 mm).
- 3. Mount 4/12 sets of pre-cut threaded rods, washer, nut and counternut on one side. Place pre-assembled threaded rods in holes in floor/ceiling, and place the damper in the opening. Tighten the tightening sets from oposite side with washer, nut and counternut.

Damper blade must be closed during installation!

Test the operation of the damper blade!

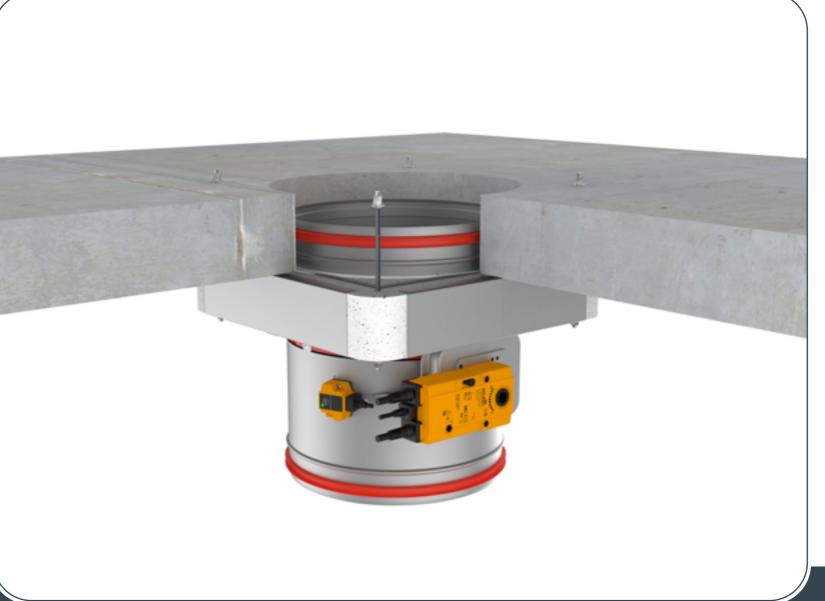




















Possible damper orientations



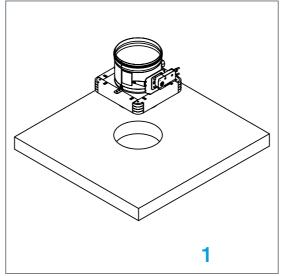

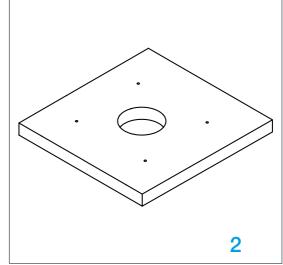

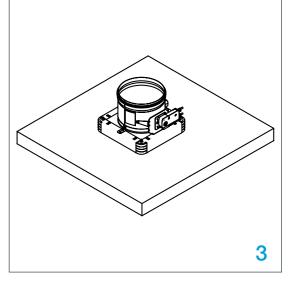



Shaft wall installation MF2 installation frame

The wall is composed of 1x2 plasterboard boards, 20 mm thick, installed on a steel frame construction.







installation!

INSTALLATION

1. For fire dampers Ød < 625 mm, make

For fire dampers Ød > 625 mm, make a

2. Place the fire damper in the opening. Damper blade must be closed during

3. Insert fire damper into wall and fasten with screws (12pcs, 6x140 mm).




















Possible damper orientations




FIRE DAMPER - FDC

FDC-MF2 Fire damper (Ød < 625 mm) installation in 90 mm shaft wall with metal studs

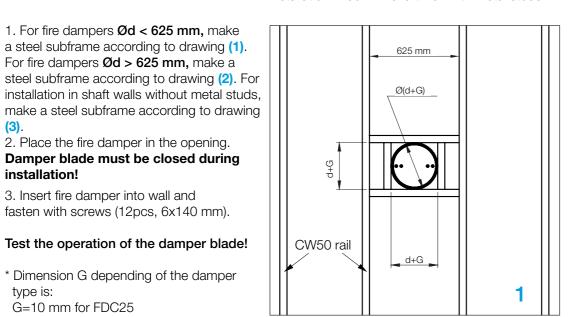


FDC-MF2 Fire damper (Ød > 625 mm) installation in 90 mm shaft wall with metal studs

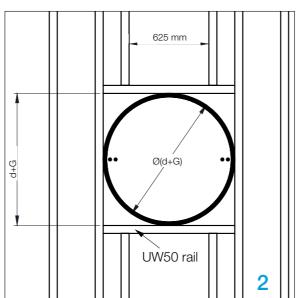


FDC-MF2 Fire damper installation in 90 mm shaft wall without metal studs

(maximum wall width 2000 mm)

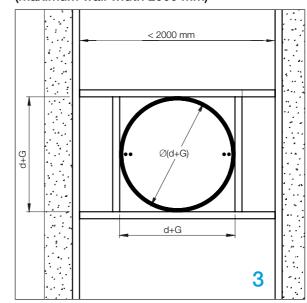

FDC25, FDC40 - side cross section

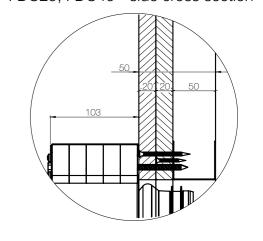

* Dimension G depending of the damper type is: G=10 mm for FDC25

G=25 mm for FDC40



Installation remote from flexible/rigid wall

Flexible wall: The wall is composed of 2x2 plasterboard boards, 12,5 mm thick, installed on a steel frame construction. To fulfill the classification it is NOT mandatory to use the mineral wool inside the wall (mineral wool with density up to 60 kg/m³ can be used). The minimum thickness of the wall is 100 mm.

Rigid wall: The wall is composed of concrete blocks (minimum density of 550 kg/m³) or reinforced concrete (minimum density of 2200 kg/m³) and with a minimum thickness of 100 mm.

Technical drawing









- 1. Place the damper in an opening according to the picture. Place ventilation duct trough wall (thickness of threaded rod for suspension should be M12 or more
- 2. Install fire damper and secure it with self-tapping screws 4,3x10 to duct (every 300 mm). Fill space between duct and wall with mineral wool (Isover U protect, min. 80 mm thickness). Additionally paint wool with Isover BSF in thickness of 1 mm
- 3. Close installation with L profiles 30x30x3 mm. Additionally fix profiles to duct with self-tapping screws, and screw them to wall with 4,5x50 screws with 200 mm distance between them. On connection wool-wall apply glue Isover BSK in thickness of 2 mm. Repeat the same procedure on the other side. Place the wool on ventilation duct in length of 80 mm


4. Place steel protection on place where insulation on **Test the operation of the damper blade!** damper ends (80x80 mm, 1 mm thick metal sheet cover)


Damper blade must be closed during installation!

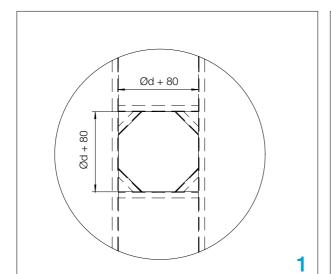

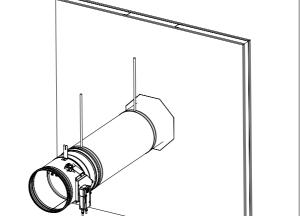

2

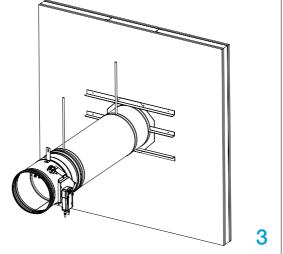

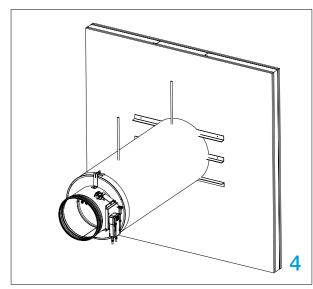













REPLACEMENTS

MAINTENANCE AND OPERATION

Possible damper orientations



Minimal installation distances

- Material compliant with the classification from DOP
- Mineral wool 250 mm wide (140 kg/m³)


Damper blade must be closed during installation!

Weichschott/Firebatt - Mineral wool

1*. Prepare opening in the wall according to the installation type. (Weichschott/Firebatt installation- build the subframe according to the drawing, see page 39).

Mortar - Gypsum blocks

- 1. Prepare opening in the wall according to the <u>page 14.</u>
 Fire damper can be installed with minimal distance of 30 mm between wall/ceiling and 30 mm from other dampers.
- 2. Insert the fire dampers into the wall and fill the space between the casings with mineral wool up to flanges.
 Fill the space between the wall/ceiling with mineral wool up to flanges.
- 3. Fill the rest of the wall openings according to the type of installation in the DOP.
- 4. Complete the installation according to the DOP.

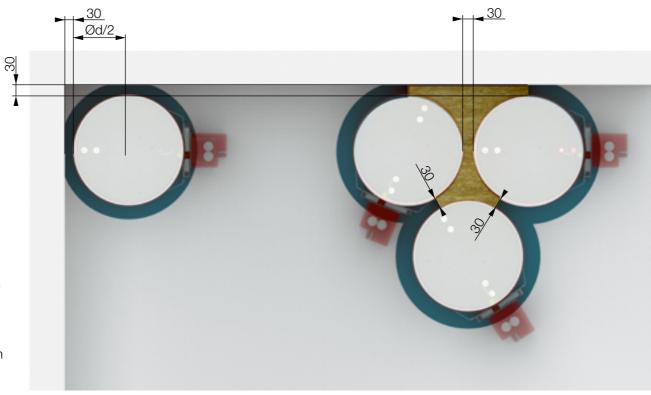


*Minimal distances from another damper or wall/ceiling.



- PRODUCT OVERVIEW
- DIMENSIONS
- INSTALLATIONS
- <u>ACTUATORS</u>
- COMMUNICATIONS MODULES
- ACCESSORIES
- REPLACEMENTS
- MAINTENANCE AND OPERATION





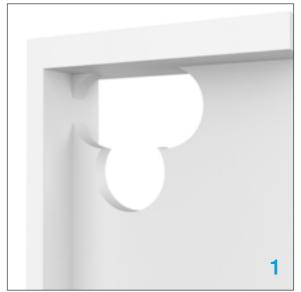









Flexible wall subframe

When installing the fire dampers in the flexible walls it is necessary to make a metal subframe onto which the damper will be fixed with screws. Subframe should be prepared according to the drawings below.


FDC25

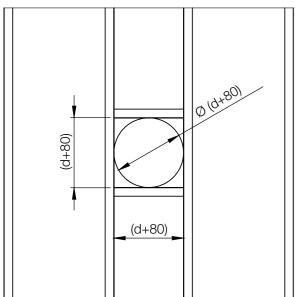


FDC40

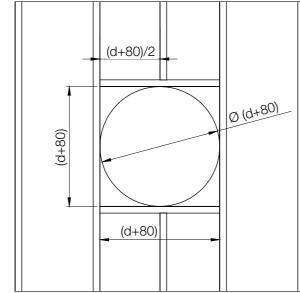

FDC25-MF1/MF2

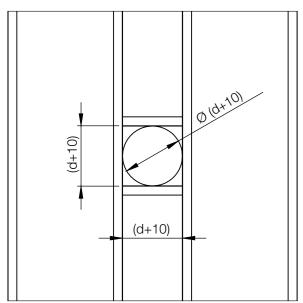

FDC40-MF2

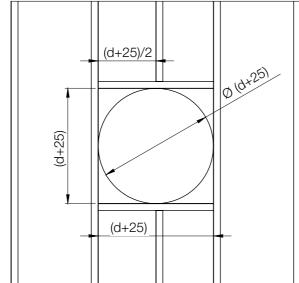



- PRODUCT OVERVIEW
- DIMENSIONS
- <u>INSTALLATIONS</u>
- <u>ACTUATORS</u>
- COMMUNICATIONS MODULES
- ACCESSORIES
- REPLACEMENTS
- MAINTENANCE AND OPERATION





MANUAL ACTUATORS R, R-S

Manual operating mechanism, optionally with end switches (R-S). In case of fire, the fire damper closes automatically.

Damper closing can be initiated either by thermal fuse melting, or by manual activation on the operating mechanism. Upon closure, damper blade is locked in closed position and can only be opened manually. Thermal fuse melting point is 72 °C.



PRODUCT OVERVIEW

<u>DIMENSIONS</u>

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION



FIRE DAMPER - FDC

R25

R25 manual actuator is installed on FDC25 fire dampers up to size d315. It is available in version with (R-S) and without (R) end switches. End switches and thermal fuse are easily replaceable and available as service parts. To upgrade to EMS, upgrade of R25 to R40 is required.


R40

R40 manual actuator is installed on FDC40 fire dampers up to size d800. It is available in version with (R-S) and without (R) end switches. Iln case remote activation is needed, R40 actuator is easily upgradeable to electromagnetic EMS-S actuator with installation of the electromagnet. End switches , thermal fuse and electromagnet are easily replaceable and available as service parts.

Technical specifications

Nominal voltage	N/A
Power	N/A
Switching capacity	1 mA500 mA, 5VDC48 VDC
Blade closing time	Spring: 1 second
Blade opening time	Manual
Manual activation	Release button on the casing
Degree of protection	IP 42
Ambient temperature range	min30 °C, max. 50 °C
Ambient humidity	95% r.h., non-condensing
Service life	Min. 30,000 cycles
Maintenance	Maintenance-free
Weight R25/R40	0,5 kg / 1.7 kg

Wiring diagram

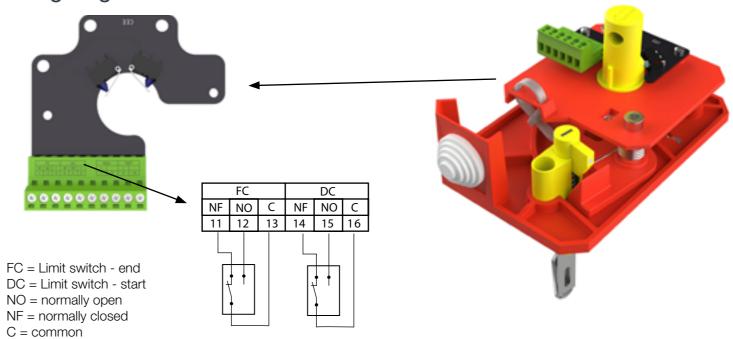



SOLENOID ACTUATOR EMS-S

Electromagnetic operating mechanism, comes with end switches as standard. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermal fuse melting or remotely by triggering the electromagnet.

Electromagnet is constantly under power and activates closing of the damper blade in case the power cuts out. Upon closure, damper blade is locked in closed position and can only be opened manually. Thermal fuse melting point is 72 °C. EMS-S mechanism is the same for FDC25/FDC40 fire dampers.





DIMENSIONS

INSTALLATIONS

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION





FIRE DAMPER - FDC

Technical specifications

Nominal voltage	Solenoid: 24/48 VDC	
Power	Dual voltage SOLENOID: Break of current: Pnom = 1.6 W	
Switching capacity	1 mA500 mA, 5 VDC48 VDC	
Blade closing time	Spring: 1 second	
Blade opening time	Manual	
Manual activation	Release button on the casing	
Degree of protection	IP 42	
Ambient temperature range	min30 °C, max. 50 °C	
Ambient humidity	95% r.h., non-condensing	
Service life	Min. 30,000 cycles	
Maintenance	Maintenance-free	
Weight	2,2 kg	

Wiring diagram

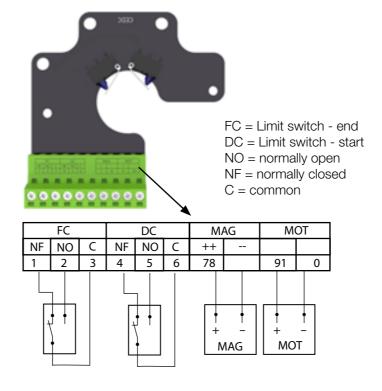

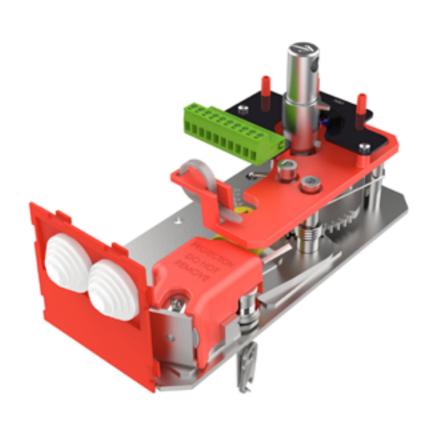



ELECTRIC ACTUATOR M24-S, M230-S, M24-S-ST

Damper is delivered in closed position. When electric actuator is connected to the power supply, damper blade will open. When the damper reaches the end position (damper open), the electro motor will stop. Closing fire damper takes place automatically when a power failure occurs. Thermal tripping device that comes with fire damper causes power circuit break at a temperature of 72 °C (optional 95 °C). If checking is needed for proper functioning of fire damper, pushing the switch on the thermal tripping device will close damper.











COMMUNICATIONS MODULES










When switch on tripping device is released, the damper will open. Damper can be opened without connecting to a voltage with enclosed handle by turning it in the direction of the arrow on electric actuator (clockwise). Damper can be locked in the desired position by fast turning handle a quarter of a turn (counterclockwise) for Belimo BF, and by puling brake on Belimo BFL and BFN.

To unlock the electro motor, turn handle clockwise for a quarter of a turn for Belimo BF, or release brake for Belimo BFL and BFN. After release, damper will be closed by return spring. When damper is opened manually, electric actuator will not move the damper into closed position in case of power failure.

Technical specifications

Type of actu		BFL24-T	BFN24-T	BFL230-T	BFN230-T	BF24-T	BF230-T
Nominal	voltage	AC/DC 24 V, 50/60 Hz	AC 24 V, 50/60 Hz	AC 230 V, 50/60 Hz	AC 230 V, 50/60 Hz	AC/DC 24 V, 50/60 Hz	AC 230 V, 50/60 Hz
voltage / - power	opening	2,5 W	4 W	3,5 W	5 W	7 W	8.5 W
con-	holding	0,8 W	1,4 W	1,1 W	2,1 W	2 W	3 W
sumption -	for wire sizing	4 VA	6 VA	6,5 VA	10 VA	10 VA	11 VA
End s	witch	1 mA3 A (0,5 A), DC 5 V AC 250V	1 mA3 A (0.5 A), DC 5 VAC 250 V	1 mA3 A (0.5 A), DC 5 VAC 250 V	1 mA3 A (0.5 A), DC 5 VAC 250 V	1 mA6 A (3 A), DC 5 V AC 250 V	1 mA3 A (0.5 A), DC 5 VAC 250 V
Running -	motor	< 60 s	< 60 s	< 60 s	< 60 s	< 120 s	< 120 s
time	spring return	~20 s	~20 s	~20 s	~20 s	~16 s	~16 s
Ambient tempera- ture range min30 °C, max. 50 °C							

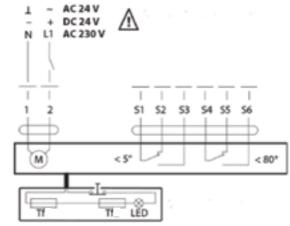

Wiring diagram

1	negative (direct-current) or neutral (alternating current)
2	positive (direct-current) or faze (alternating current)
S1	common micro switch closed damper
S2	normally closed micro switch closed damper

S3 normally open micro switch closed damper S4 common micro switch open damper

FIRE DAMPER - FDC

S5 normally closed micro switch open damper


S6 normally open micro switch open damper

Tf temperature sensor on the outer side of the duct (ambient temperature) max. 72 °C



ELECTRIC ACTUATOR SCHISCHEK ExMax

Damper is delivered in closed position. When electric actuator is connected to the power supply damper will open. When the damper reaches the end position(damper open), in which is it blocked, the electric actuator will stop. Closing fire damper takes place automatically when a power failure occurs. Thermal tripping device that comes with fire damper causes power circuit break at a temperature of 72 °C (inside or outside duct). If checking is needed for proper functioning of fire damper, pushing the switch on the thermal tripping device will close damper. When switch on tripping device is released, the damper will open.

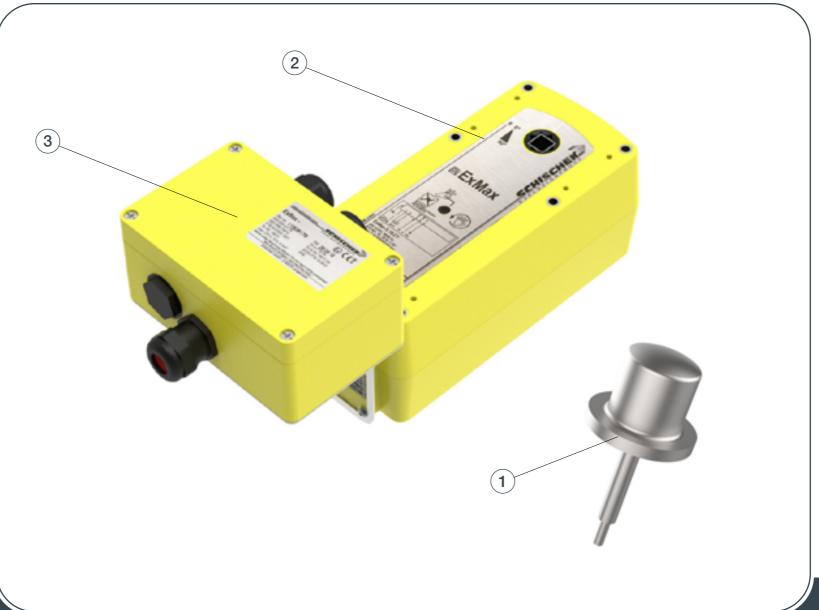



DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION



Damper can be opened without connecting to a voltage with enclosed Allen key, by turning in the direction of the arrow on electric actuator (clockwise). After release of Allen key, damper will go to closed position.


- 1) <u>Tecnical documentation Safety temperature</u> <u>trigger Schischek ExPro-TT</u>
- 2) Tecnical documentation electric actuator Schischek ExMax-5.10-BF
- 3) Tecnical documentation Ex-e terminal box ExBox-BF

Technical specifications

Туре	ExMax -5.10-BF
Torque	5/10 Nm
Power Supply	24-230 V AC/DC
Running time	3/15/30/60/120 s / 90°
Spring return	3 or 10s / 90°
Control mode	On-Off, 3 position
Feedback	2 x aux switches + Ex. tripping device
Ambient temperature range	min40 °C, max. 40 °C
Ambient humidity	0-90% r.h., non-condensing
Service life	Min. 10,000 cycles @ 10 s, min 1000 cycles @ 1s
Maintenance	Maintenance-free
Weight	3,5 kg

FIRE DAMPER - FDC


Wiring diagram

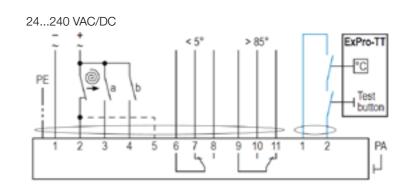



COMMUNICATION MODULES POWERLINE

- 230 VAC Powerline communication on field side
- Topology: Free
- Max. distance between master and slave: 1200 m
- Display of damper position (incl. angle**)
- Button on device for damper function check
- Relay outputs for enabling ventilation
- Optional control and monitoring via Modbus RTU (RS-485) or Modbus TCP/IP (Ethernet) BACnet MS/TP or BACnet IP
- Optional monitoring on external computer or on control cabinet touch screen (TCP/IP communication)
- USB interface and CDU software for simple configuration and diagnostics at on-site computer
- Event logging

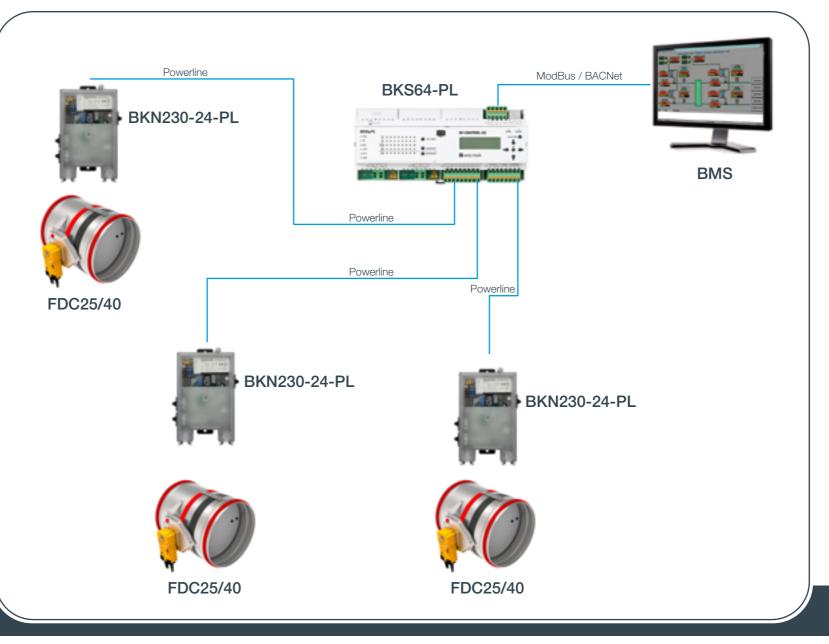

PRODUCT OVERVIEW

DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC



COMMUNICATIONS MODULES



BKS64 - PL is a master for up to 64 BKN230-24-PL devices. It is a control and display module for motorized fire protection dampers or smoke extraction dampers. It communicates with the slaves directly via the 230 VAC power cable.

The Powerline slaves (BKN230-24-PL) have a unique physical MAC address and can therefore be detected automatically irrespective of pre-addressing. Automatic or selective master, regardless of preaddressing or automatic addressing addressing, which is primarily for spatial location, can be carried out on the slave itself before installation or later during commissioning.

The damper positions and any faults are displayed directly on the device. Dampers can be selected and tested with the pushbutton. The dampers can be opened and closed via potential-free contact or +24 V AC/DC external voltage.

The master can also be controlled via MODBUS (TCP/IP and RTU) or BACnet (IP or MS/TP) and therefore can be considered as a Modbus/Powerline or BACnet/Powerline Gateway.

Technical documentation BKS

BKN230-24-PL is the link between the Powerline Master (e.g. BKS64-PL) and the motorized fire damper. It supplies a conventional spring return or a Belimo Top-Line "-ST" actuator and optionally an optical smoke detector with electrical energy. Communication with the master device takes place directly via the 230VAC supply line (POWERLINE technology). The

Powerline participants (BKN230-24-PL) have a unique physical MAC address and are therefore always recognized by the by the master.

- 230 VAC Powerline communication with dynamic signal adjustment and zero crossing detection
- Connection for a conventional or Belimo Topline actuator (auto recognition)

Technical documentation BKN



Power supply

Spring terminal for 230 VAC 2 x 2.5 mm2 installation cable

X1.1 Neutral conductor (N)

X1.2 Phase conductor (L)

Fuse protection:

13 A. characteristic D if less than 32 x BKN230-24-PL 16 A, characteristic D if 32 or more x BKN230-24-PL (slave fuse: 10A, slow-blow)

Powerline output


Spring terminal for 230 VAC installation cable X1.1 Neutral conductor (N) X1.2 Phase conductor (L) Cross section

1.5 mm2

if less than 32 x BKN230-24-PL

2.5 mm2


if 32 or more x BKN230-24-PL

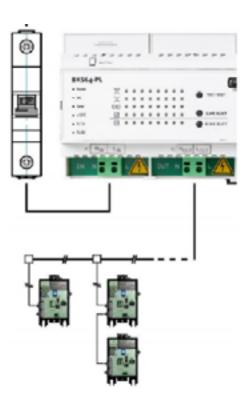



ACCESSORIES

- 1 GKF boards GKF boards are used in dry and wet installations as wool or mortar cover. It keeps the installation material in place and provides for better fire penetration characteristics of the whole installation. Kit dimensions- \emptyset + 300 mm.
- 2 Flexible duct connections Flexible duct connectors are used in HVAC systems for isolation from structure-borne noise, expansion compensation and fire damper connections.
- 3 Safety grilles Fire damper, safety grille and, if applicable, extension piece are assembled at the factory to form a unit. The free cross sectional area of the cover grille is approx. 70%.

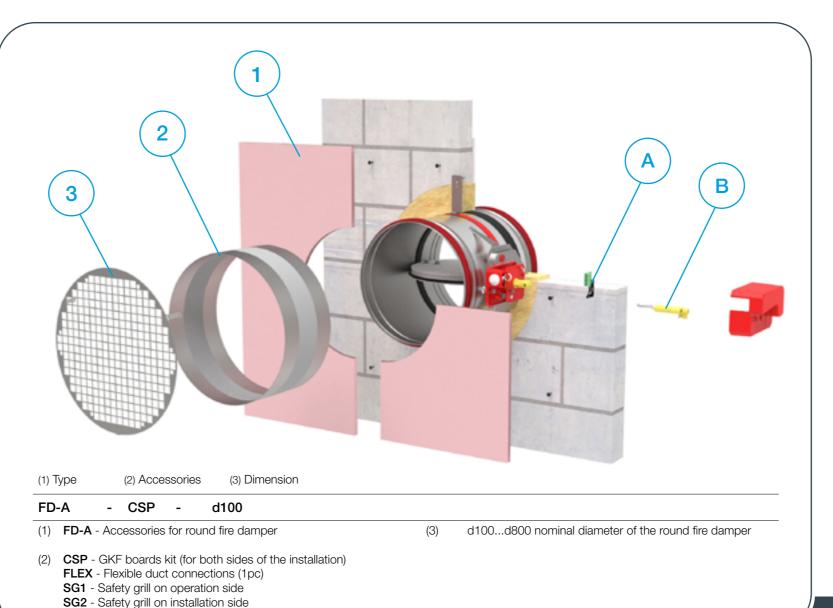

PRODUCT OVERVIEW

DIMENSIONS

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

 
<u>ACCESSORIES</u>

REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC





• WARNING! Install the original parts only!

A Double contact S kit (CEE board) FD-A-R25S-KIT A*Double contact S kit (CEDC board) FD-A-R40S-KIT see page 41.

B Fuse kit FD-A-THERM-72

C Solenoid current emission kit FD-A-EMS-KIT

D Inspection hatch FDC-A-IH

E Communication module bracket FD-A-CMB

F Belimo thermal fuse 72 °C FD-A-BAT72

G Belimo thermal fuse 95 °C FD-A-BAT95

H Thermal fuse blanking plate FD-BP-KIT

I Kit A FDC-A-KIT-A Upgrade R25 to electric actuator J Kit B FDC-A-KIT-B Upgrade R40 to electric actuator

K R40 manual mechanism FD-A-R40 see page 40.

L Smoke sensor see page 46.
















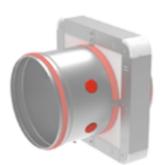











SMOKE SENSOR ASSEMBLY FDC-SSA


Smoke sensor assembly is developed to detect smoke in ventilation ducts and combines a smoke detector and an adaptor system where both tube and housing are specially designed for optimum airflow through the smoke detector. Smoke sensor provides the signal for the fire damper which is activated when smoke is detected. Smoke sensor assembly consists of casing (length: FDC25=380 mm, FDC40=390 mm), smoke sensor and specially designed venturi pipe inside the duct.

For proper functioning of the smoke sensor (as it is physically connected as in the render above) a straight length of 5 times hydraulic diameter, in the size of the connecting duct, should be in front of the sensor. When the sensor is installed separate from the fire damper there are two conditions to be met:

1) Length of 5 times hydraulic diameter, in the size of the connecting duct, should be in front of the sensor.

2) Length of 3 times hydraulic diameter, in the size of the connecting duct, should be after the sensor.



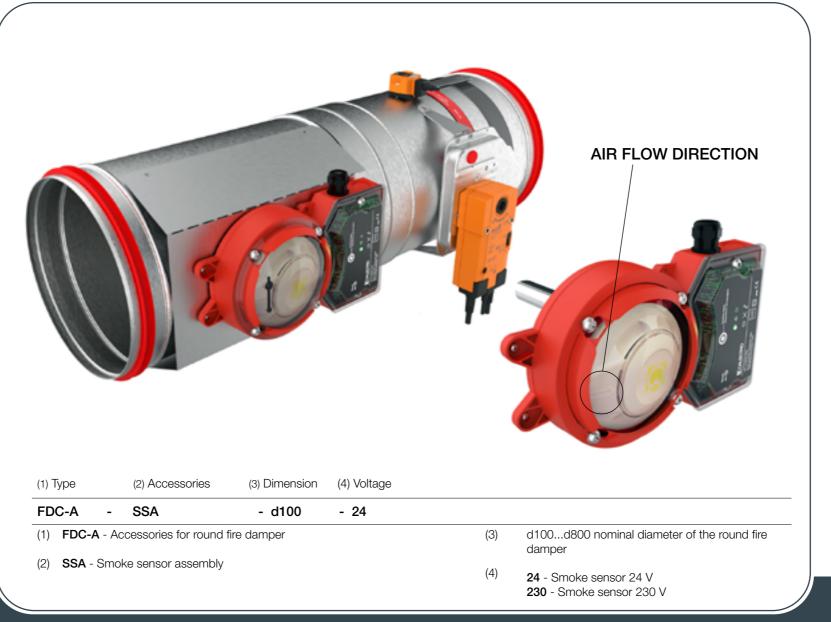

PRODUCT OVERVIEW

<u>DIMENSIONS</u>

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

<u>ACCESSORIES</u>


REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC

Spare parts

Smoke sensor FD-A-UG-5-AFR-24V Smoke sensor FD-A-UG-5-AFR-230V A Sampling tube FD-A-ST5 B Rubber gasket FD-A-HFU204 C Isolation extension FD-A-HFU500

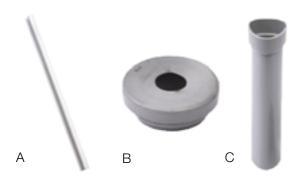

For more information, visit website: <u>Technical documentation Calectro</u>


Technical specifications

	FDC-A-UG-5-AFR-24V	FDC-A-UG-5-AFR-230V	
Voltage Supply	24V AC/DC -15%, +10% Not polarity sensitive	230V AC -15%, +10% Not polarity sensitive	
Detector type	Optical UG-5-AFR-24V	Optical UG-5-AFR-230V	
Max. power consumption	220 mA	30 mA	
Operating temperature	-10°C to +55°C		
Maximum humidity	99% rH		
Duct air velocity range	1 to 20 m/s		
Approvals	VdS CE, EN-54-27		
Relay output	Potential free		
Smoke alarm relays	Two changing contacts 250V, 8A		
Service alarm	One breaking contact 250V, 5A		
System error alarm	One breaking contact 250V, 5A		
Low Flow alarm:	One breaking contact 250V, 5A		
LED on smoke detector:	Green - service alarm (contamination) Red - smoke alarm		
LED on PCB:	Green - normal operation Yellow - system error Yellow - Low-Flow		

Wiring diagram

FDC-A-UG-5-AFR-24V

FDC-A-UG-5-AFR-230V

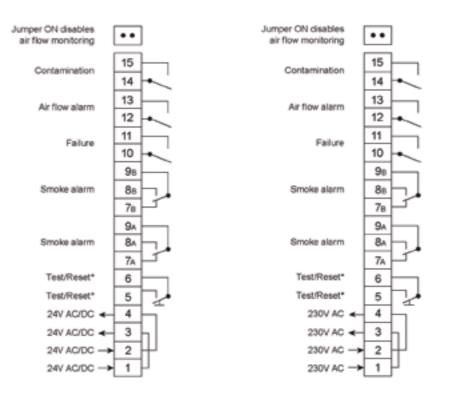

SMOKE SENSOR CASING ROTATION



Smoke sensor casing can be rotated (90°-180°-270°) in order to provide better flexibility for wiring.

To rotate smoke sensor casing, follow the below instructions.

- 1. Follow first step of **smoke sensor rotation**: locate and re move hex screws.
- 2. Rotate the smoke sensor casing (90° -180° -270°).
- 3. Fix the screws following the fourth step of **smoke sensor rotation**.



- PRODUCT OVERVIEW
- <u>DIMENSIONS</u>
- INSTALLATIONS
- <u>ACTUATORS</u>
- COMMUNICATIONS MODULES
- ACCESSORIES
- REPLACEMENTS
- MAINTENANCE AND OPERATION



FIRE DAMPER - FDC


SMOKE SENSOR ROTATION


Smoke sensor assembly is supplied with standard airflow direction. *If you rotate the smoke sensor, the distance of 5 times the hydraulic duct diameter should be left before the sensor!

1. Locate hex screws, unscrew them and remove the cover.


Pay attention to detail A!

- 2. Remove the casing, locate the screws and remove them.
- 3. Rotate smoke senzor (0° -180°) according to air flow direction and fix it with screws.
- 4. Put the casing back and install the cover. Pay attention to detail A!

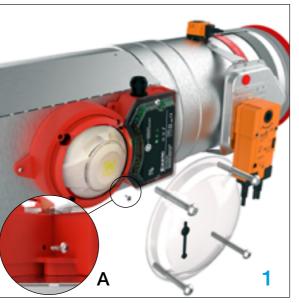


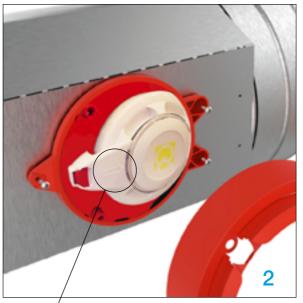




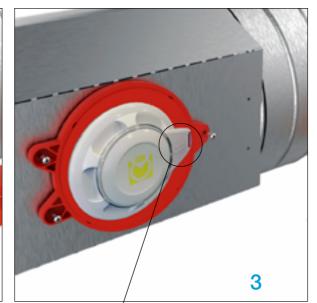



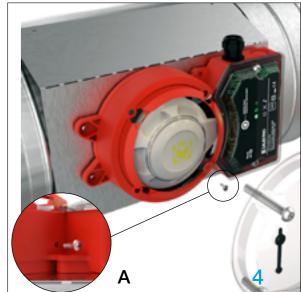


UPGRADE TO END CONTACTS (R25 → R25-S)

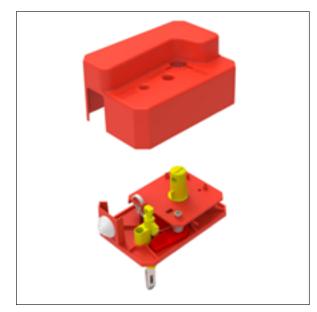






UPGRADE TO END CONTACTS (R40 → R40-S)

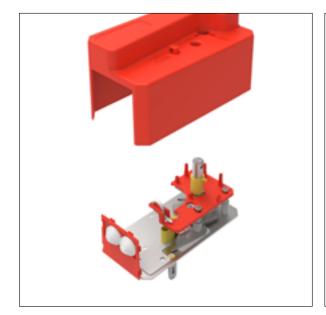



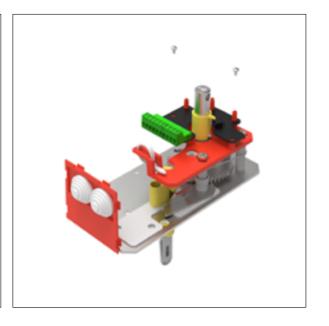







INSTALLATIONS

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION





Video instructions

- 1. Locate hex screw, unscrew it and remove the cover.
- 2. Insert CEE (R25)/CEDC (R40) board in the appropriate place.
- 3. Screw the board to the plate. Put the cover back in place!



UPGRADE FROM MANUAL (R40-S) **TO EMS**

To upgrade R40 to EMS, it is necessary to install kit for end contacts (FD-A-R40S-KIT).

To upgrade R25/RS25-S to EMS, it is necessary to install R40 mechanism (FD-A-R40) and kit for end contacts (FD-A-R40S-KIT).



Video instructions

 






- **PRODUCT OVERVIEW**
- **DIMENSIONS**
- **INSTALLATIONS**
- **ACTUATORS**
- **COMMUNICATIONS MODULES**
- **ACCESSORIES**
- **REPLACEMENTS**
- **MAINTENANCE AND OPERATION**

FIRE DAMPER - FDC



- 2. Insert the EMS on the custom plate.
- 3. Screw the EMS to the plate and connect the 2-pin connector into the appropriate socket on the CEDC board.
- 4. Put the cover back in place.

Test the operation of the damper blade!











REPLACEMENT OF THERMAL FUSE (R25)



Video instructions









DIMENSIONS

<u>INSTALLATIONS</u>

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC

- 1. Find the hex screw located on the cover, unscrew and remove the screw and the cover.
- 2. Find the hex screw on the thermal fuse and unscrew it.
- 3. Remove the old thermal fuse. Insert a new thermal fuse and screw it back on.
- 4. Put the cover back in place.

Test the operation of the damper blade!









50




REPLACEMENT OF THERMAL FUSE (R40)



Video instructions



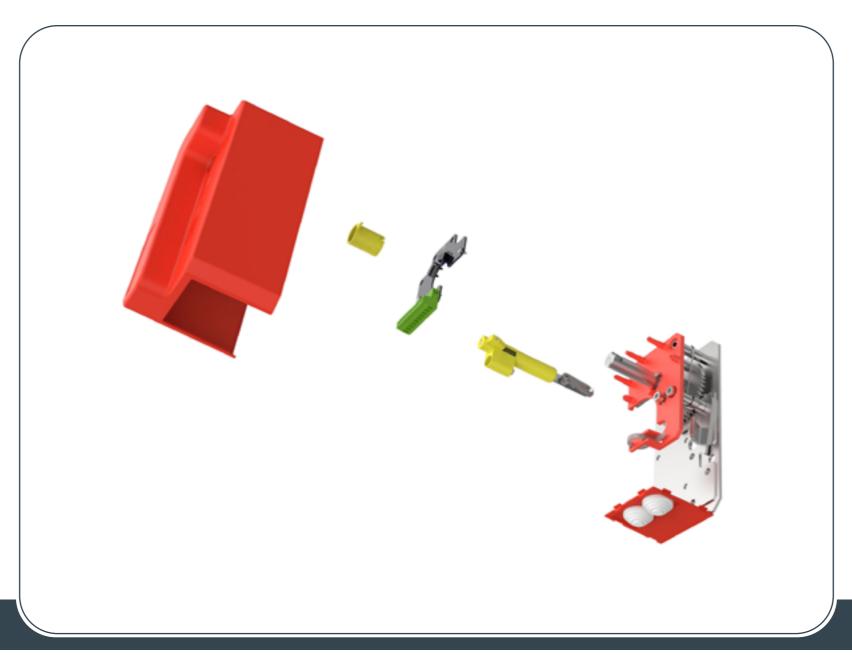

- PRODUCT OVERVIEW
- <u>DIMENSIONS</u>
- <u>INSTALLATIONS</u>
- <u>ACTUATORS</u>
- COMMUNICATIONS MODULES
- ACCESSORIES
- REPLACEMENTS
- MAINTENANCE AND OPERATION

FIRE DAMPER - FDC

- 1. Find the hex screw located on the cover, unscrew and remove the screw and the cover.
- 2. Remove the position indicator sleeve.
- 3. Locate the 3 hex screws. Unscrew them. Remove the CEDC board (if applicable).
- 4. Locate the screw on the thermal fuse. Unscrew it. Remove the old thermal fuse. Insert a new thermal fuse. Put the CEDC board and the cover back in place.

Test the operation of the damper blade!












UPGRADE TO ELECTRIC ACTUATOR

Manual R25 <-> Belimo

d100-d315

The blade must be closed before replacement the mechanism.



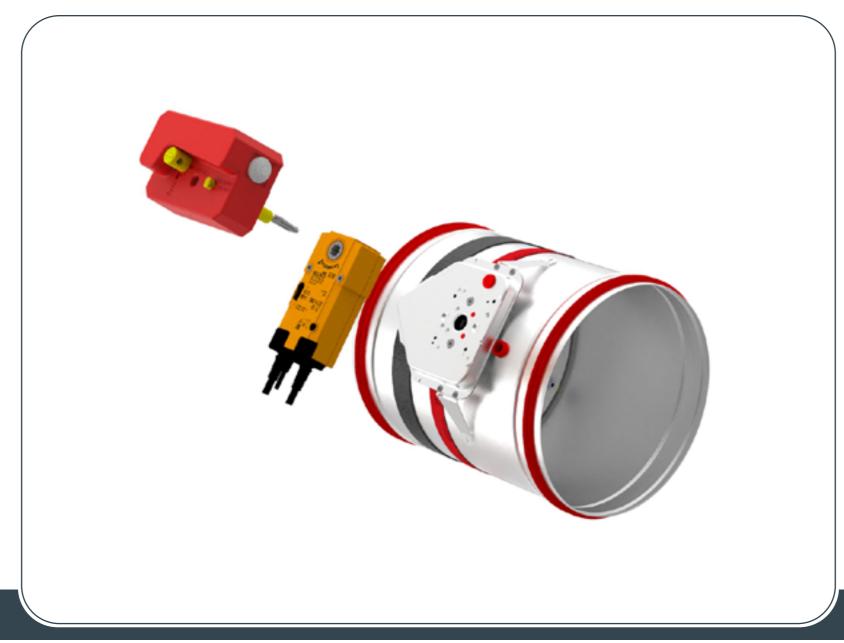

PRODUCT OVERVIEW

DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC



NOTE: Use Kit A (FD-A-KTA) to upgrade to electric **Test the operation of the damper blade!** actuator!



- 1. Find the 2 hex screws located on the board of mechanism, unscrew them and remove manual mechanism.
- 2. Find the 2 hex screws located on the transition board (B), unscrew them and replace FA transition plate (A) with BE transition plate.

NOTE: Pay attention to the position of indication cut on the BE transition plate.

- 3. Insert the rubber plug into the opening for the thermal fuse. Install the Belimo actuator and fasten it with screws (2 hexagon screws M6x55).
- 4. Drill hole (ø16 mm) for the fuse of Belimo mechanism and fix it with self-tapping screws. NOTE: Install the thermal fuse in a place where it will not interfere with the operation of the damper blade!









52




UPGRADE TO ELECTRIC ACTUATOR

R40 <-> Belimo

d355-d800

The blade must be closed before replacement the mechanism.



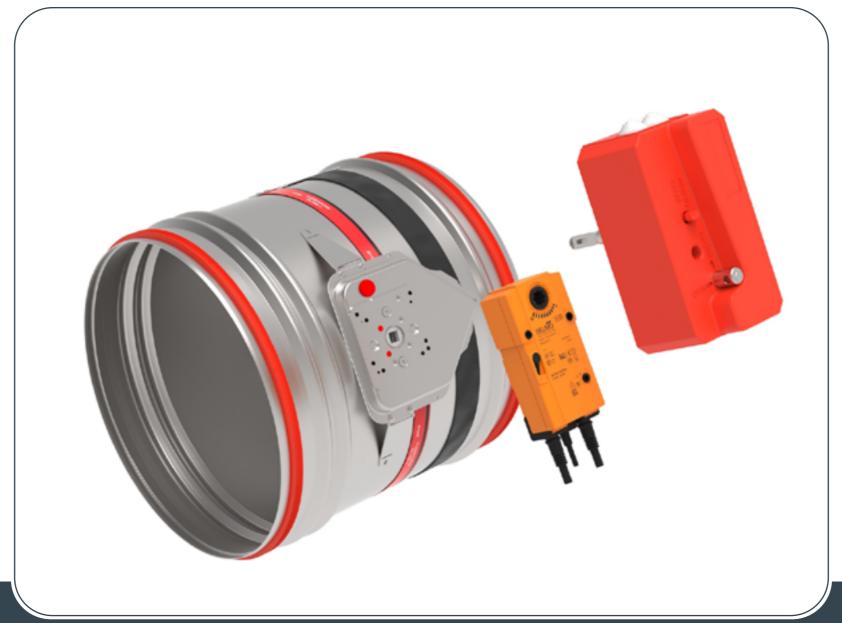

PRODUCT OVERVIEW

DIMENSIONS

INSTALLATIONS

ACTUATORS

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION

FIRE DAMPER - FDC



NOTE: Use Kit B (FD-A-KTB) to upgrade to electric actuator!

- * Find the screw and remove the cover!
- 1. Find the 3 hex screws located on the board of mechanism, unscrew them and remove manual mechanism.
- 2. Find the 2 hex screws located on the transition board (B), unscrew them and replace FA transition plate (A) with BE transition plate.

NOTE: Pay attention to the position of indication cut on the BE transition plate.


- 3. Insert the rubber plug into the opening for the thermal fuse. Install the Belimo actuator and fasten it with screws (2 hexagon screws M6x55).
- 4. Drill hole (ø16 mm) for the fuse of Belimo mechanism and fix it with self-tapping screws.

NOTE: Install the thermal fuse in a place where it will not interfere with the operation of the damper blade!

Test the operation of the damper blade!





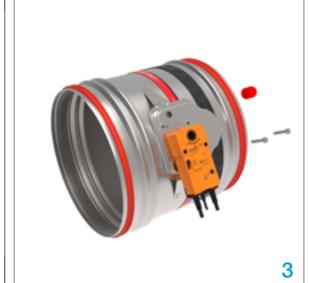



53



HOW TO ROTATE ELECTRIC ACTUATOR (Belimo)

d100-d800

The blade must be closed before replacement the mechanism.



PRODUCT OVERVIEW

DIMENSIONS

INSTALLATIONS

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION



FIRE DAMPER - FDC

- 1. Locate the 2 hex screws, unscrew and remove them.
- 2. Remove the Belimo electric actuator.
- 3. Find the 2 hex screws located on the transition board (B), unscrew them and rotate BE transition plate (A) 90°.

NOTE: The direction of rotation of BE transition plate and the electric actuator must be the same!

4. Fix the transition plate to the transition board and install the Belimo actuator.

Test the operation of the damper blade!












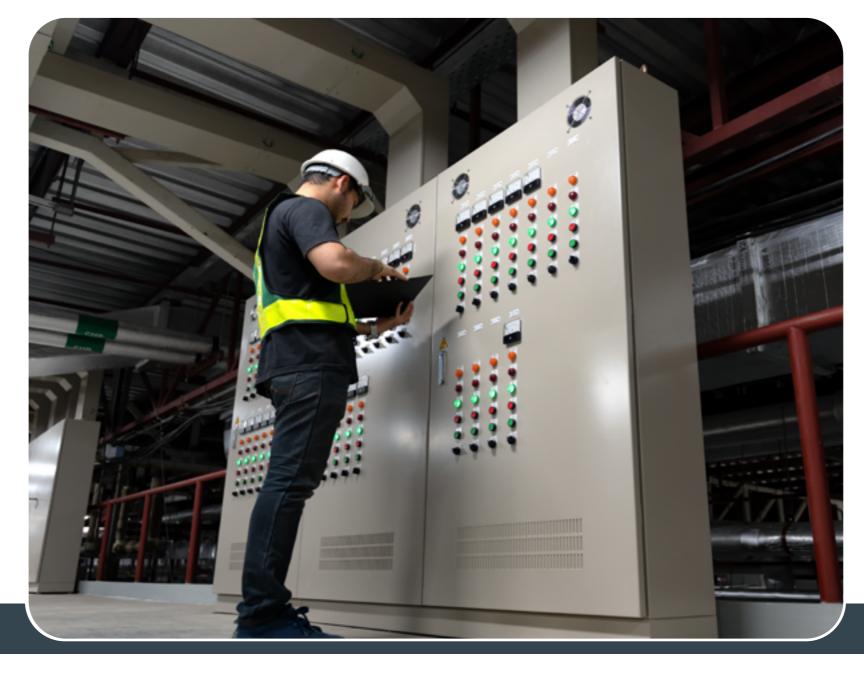

PRODUCT OVERVIEW

<u>DIMENSIONS</u>

INSTALLATIONS

<u>ACTUATORS</u>

COMMUNICATIONS MODULES

ACCESSORIES

REPLACEMENTS

MAINTENANCE AND OPERATION



FIRE DAMPER - FDC

TRANSPORT

After arrival, check the fire damper for transport damage and shortcomings. In case of any damage or shortcomings, immediately contact your supplier.

STORAGE

If the damper is not installed immediately:

- Remove any wrapping.
- Protect fire damper from dust and contamination.
- Do not expose the fire damper to the effects of weather - store fire damper in dry place.
- Do not store the unit below -20 °C or above 50 °C.

Please properly dispose of packaging material.

MAINTENANCE AND OPERATION

Fire dampers are designed with fully enclosed drive mechanism outside of the duct and as such do not require cleaning and regular maintenance.

However, activation mechanism should be inspected for proper operation on regular basis.

- Provide at least one annual check of the damper
- After each intervention, provide a systematic cleaning of dust and especially the solenoid and its movable plate
- · Check the if the electrical terminals are tightened
- Cleaning instruction: clean with a sponge, with water or a mild detergent
- Disinfection instruction: spray disinfectant (desinfectant may contain alcohol which is flammable, take precaution to avoid ignition)

It is not permitted to alter the dampers in any way nor perform any changes to their structure (except for the service procedures described in this manual) without the manufacturer's consent. Provide at least one annual check of the damper. The functional test must be carried out in compliance with the basic maintenance principles of the European norms EN 13306, EN 15423 and EN15650.

COMMISSIONING

- Carefully unpack FDC fire damper be careful of sharp edges and do not use excessive force for unpacking
- Inspect the fire damper check the fire damper for damage
- Installation of the fire damper according to the installation instructions (page 14.).
- Before commissioning: check the fire damper functions.

FUNCTIONS

- Release mechanism:
- Damper blade can be closed and opened manually
- 2) EMS:
- Signal testing the damper blade must close
- 3) Electric actuator:
- Signal testing the damper blade must close/open
- 4) Thermal fuse:
- By a button the damper blade must be closed by pressing the button



- Scheepswervenweg 1, 9608 PD Westerbroek
- +31 598 361 221
- contact@solid-air.nl
- www.solid-air.nl