

1 Ground source heat pumps

Room thermostat



Code number

086L3937

Heat pumps

Inverter

Mega



Ground source
heat pumps

Air source heat pumps

Other accessories

Commercial ground
source heat pumps

Water heaters and
volume tanks

An active room sensor will help the heat pump to adjust the supply line temperature in situations where the indoor temperature changes as a result of unmonitored heat sources, such as separate firewood place or high solar radiation.

The Genesis Room sensor is showing the actual room temperature, and after pressing button, also desired temperature. The room sensor may also be activated and de-activated by pressing button.

Installation should be made with pair-twisted 4-membered cable (for Modbus communication and 24V AC supply that is available in the heat pump).

The room sensor is delivered with a short instruction (English and Swedish) for installation and use.

New software needed for room sensor will be made available at delivery start. Heat pumps with earlier software versions than 2.01.000 will need a software update to support the room sensor.